

User Guide

Kyocera KX440 Series



User Guide for Kyocera KX440 Series Phones

This manual is based on the production version of the Kyocera KX440 Series phones with

BREWChat client. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice. The products and equipment described in this documentation are manufactured under license from QUALCOMM Incorporated under one or more of the following

U.S. patents:

4,901,307 5,056,109 5,099,204 5,101,501 5,103,459
5,107,225 5,109,390 5,193,094 5,228,054 5,257,283
5,265,119 5,267,261 5,267,262 5,280,472 5,283,536
5,289,527 5,307,405 5,309,474 5,337,338 5,339,046
5,341,456 5,383,219 5,392,287 5,396,516 D356,560
5,408,697 5,414,728 5,414,796 5,416,797 5,426,392
5,437,055 D361,065 5,442,322 5,442,627 5,452,473
5,461,639 5,469,115 5,469,471 5,471,497 5,475,870
5,479,475 5,483,696 5,485,486 5,487,175 5,490,165
5,497,395 5,499,280 5,504,773 5,506,865 5,509,015
5,509,035 5,511,067 5,511,073 5,513,176 5,515,177
5,517,323 5,519,761 5,528,593 5,530,928 5,533,011
5,535,239 5,539,531 5,544,196 5,544,223 5,546,459
5,548,812 5,559,881 5,559,865 5,561,618 5,564,083
5,566,000 5,566,206 5,566,357 5,568,483 5,574,773
5,574,987 D375,740 5,576,662 5,577,022 5,577,265
D375,937 5,588,043 D376,804 5,589,756 5,590,069
5,590,406 5,590,408 5,592,548 5,594,718 5,596,570
5,600,754 5,602,834 5,602,833 5,603,096 5,604,459
5,604,730 5,608,722 5,614,806 5,617,060 5,621,752
5,621,784 5,621,853 5,625,876 5,627,857 5,629,955
5,629,975 5,638,412 5,640,414 5,642,398 5,644,591
5,644,596 5,646,991 5,652,814 5,654,979 5,655,220
5,657,420 5,659,569 5,663,807 5,666,122 5,673,259
5,675,581 5,675,644 5,680,395 5,687,229 D386,186
5,689,557 5,691,974 5,692,006 5,696,468 5,697,055
5,703,902 5,704,001 5,708,448 5,710,521 5,710,758
5,710,768 5,710,784 5,715,236 5,715,526 5,722,044
5,722,053 5,722,061 5,722,063 5,724,385 5,727,123
5,729,540 5,732,134 5,732,341 5,734,716 5,737,687
5,737,708 5,742,734 D393,856 5,748,104 5,751,725
5,751,761 5,751,901 5,754,533 5,754,542 5,754,733
5,757,767 5,757,858 5,758,266 5,761,204 5,764,687
5,774,496 5,777,990 5,778,024 5,778,338 5,781,543
5,781,856 5,781,867 5,784,406 5,784,532 5,790,589
5,790,632 5,793,338 D397,110 5,799,005 5,799,254
5,802,105 5,805,648 5,805,843 5,812,036 5,812,094
5,812,097 5,812,538 5,812,607 5,812,651 5,812,938
5,818,871 5,822,318 5,825,253 5,828,348 5,828,661
5,835,065 5,835,847 5,839,052 5,841,806 5,842,124

5,844,784 5,844,885 5,844,899 5,844,985 5,848,063
5,848,099 5,850,612 5,852,421 5,854,565 5,854,786
5,857,147 5,859,612 5,859,838 5,859,840 5,861,844
5,862,471 5,862,474 5,864,760 5,864,763 5,867,527
5,867,763 5,870,427 5,870,431 5,870,674 5,872,481
5,872,774 5,872,775 5,872,823 5,877,942 5,878,036
5,870,631 5,881,053 5,881,368 5,884,157 5,884,193
5,884,196 5,892,178 5,892,758 5,892,774 5,892,816
5,892,916 5,893,035 D407,701 5,898,920 5,903,554
5,903,862 D409,561 5,907,167 5,909,434 5,910,752
5,911,128 5,912,882 D410,893 5,914,950 5,915,235
5,917,708 5,917,811 5,917,812 5,917,837 5,920,284
D411,823 5,923,650 5,923,705 5,926,143 5,926,470
5,926,500 5,926,786 5,930,230 5,930,692
Other patents pending.

Kyocera is a registered trademark of Kyocera Corporation.

Doodler is a trademark of Kyocera Wireless Corp.

QUALCOMM is a registered trademark, and BREW and BREWChat are trademarks of QUALCOMM Incorporated.

Openwave is a trademark of Openwave Systems Incorporated. eZiText is a registered trademark of Zi Corporation.

All other trademarks are the property of their respective owners.

Copyright © 2004 Kyocera Wireless Corp. All rights reserved. Ringer Tones Copyright © 2000-2002 Kyocera Wireless Corp

82-K5873-1EN, Rev. 002

FCC/IC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To maintain compliance with FCC RF exposure guidelines, if you wear a headset on your body, use the Kyocera Wireless Corp (KWC) approved case CA90-B1860 or holster 55-B1795-02.

Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 25 mm separation distance, including the antenna, and the user's body.

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR values for this model phone are:

Cellular Band (Part 22)—Head:1.36 mW/g;
Body-worn: 0.584 mW/g with KWC universal belt clip 55-B1795-02;

Face: 0.397 mW/g with at least one inch (2.5 cm) separation.

PCS Band (Part 24)—Head:1.46 mW/g;
Body-worn: 0.311 mW/g with KWC universal belt clip 55-B1795-02;

Face: 0.22 mW/g with at least one inch (2.5 cm) separation.

Recommended body worn accessories are only intended for use with the standard or thin battery door, not the sport clip.

(Body-worn measurements differ among phone models, depending upon availability of accessories and FCC requirements. The body-worn SAR values provided above were obtained by using Kyocera Wireless Corp. (KWC) approved case CA90-B1860 or holster 55-B1795-02. The sport clip is not designed to be a body-worn accessory). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section

<http://www.fcc.gov/oet/fccid> after searching on FCC ID OVFKWC-KX444. Additional information on SAR can be found on the Cellular Telecommunications and Internet Association (CTIA) web-site at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Caution

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.

Warning

Use only Kyocera approved accessories with Kyocera phones. Use of any unauthorized accessories (includes faceplates/front housings) may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Walkie-talkie radio feature

When using your phone as a walkie-talkie radio, hold the phone a minimum separation distance of one inch (2.5 cm) between your face and the device, including the antenna, to comply with FCC exposure limits.

Optimize your phone's performance

Use the guidelines on page 1 to learn how to optimize the performance and life of your phone, antenna, and battery.

Air bags

If your vehicle has an air bag, DO NOT place installed or portable phone equipment or other objects over the air bag or in the air bag deployment area. If equipment is not properly installed, you and your passengers risk serious injury.

Medical devices

Pacemakers—Warning to pacemaker wearers: wireless phones, when in the 'on' position, have been shown to interfere with pacemakers. The phone should be kept at least six (6) inches away from the pacemaker to reduce risk. The Health Industry Manufacturers Association and the wireless technology research community recommend that you follow these guidelines to minimize the potential for interference.

- Always keep the phone at least six inches (15 centimeters) away from your pacemaker when the phone is turned on.
- Do not carry your phone near your heart.
- Use the ear opposite the pacemaker.
- If you have any reason to suspect that interference is taking place, turn off your phone immediately.

Hearing aids—Some digital wireless phones may interfere with hearing aids. In the event of such interference, you may want to consult your service provider or call the customer service line to discuss alternatives.

Other medical devices—If you use any other personal medical device, consult the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

In health care facilities—Turn your phone off in health care facilities when instructed. Hospitals and health care facilities may be using equipment that is sensitive to external RF energy.

Potentially unsafe areas

Posted facilities—Turn your phone off in any facility when posted notices require you to do so.

Aircraft—FCC regulations prohibit using your phone on a plane that is in the air. Turn your phone off or switch it to Airplane mode (page 18) before boarding aircraft.

Vehicles—RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy.

Blasting areas—Turn off your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres—Turn off your phone when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions.

Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane
- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

Use with care

Use only in normal position (to ear). Avoid dropping, hitting, bending, or sitting on the phone.

Keep phone dry

If the phone gets wet, turn the power off immediately and contact your dealer. Water damage may not be covered under warranty.

Resetting the phone

If the screen seems frozen and the keypad does not respond to keypresses, reset the phone by completing the following steps:

1. Remove the battery door.
2. Remove and replace the battery.

If the problem persists, return the phone to the dealer for service.

Accessories

Use only Kyocera-approved accessories with Kyocera phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

To shop online for a Hands-free Car Kit and other phone accessories, visit www.kyocera-wireless.com/store.

To order by phone, call (800) 349-4188 (U.S.A. only) or (858) 882-1410.

Radio frequency (RF) energy

Your telephone is a radio transmitter and receiver. When it is on, it receives and sends out RF energy. Your service provider's network controls the power of the RF signal. This power level can range from 0.006 to 0.6 watts.

In August 1996, the U.S. Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. These guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies in the following reports:

- ANSI C95.1 (American National Standards Institute, 1992)
- NCRP Report 86 (National Council on Radiation Protection and Measurements, 1986)
- ICNIRP (International Commission on Non-ionizing Radiation Protection, 1996)

Your phone complies with the standards set by these reports and the FCC guidelines.

E911 Mandates

Where service is available, this handset complies with the Phase I and Phase II E911 Mandates issued by the FCC.

Battery and charger specifications

Charger	Input	Output
CV90-60858-01	100-240VAC / 50/60Hz	4.5V 1.5A
CV90-60859-1	120VAC / 60Hz	5.2V 400mA
Standard Battery: 3.6V / 900mAh		
High-capacity Battery: 3.6V / 1300mAh		

Customer support

Your service provider's customer support department may be accessible directly from your phone when you dial a number such as *611. They can answer questions about your phone, phone bill, call coverage area, and specific features available to you, such as call forwarding or voicemail.

For questions about the phone features, refer to the materials provided with your phone, or visit www.kyocera-wireless.com.

For additional questions, you may contact the Kyocera Wireless Corp. Customer Care Center in one of the following ways:

- Web site: www.kyocera-wireless.com
- Email: phone-help@kyocera-wireless.com
- Telephone: 1-800-349-4478 (U.S. and Canada) or 1-858-882-1401
- Customer support phone numbers are also available in the following countries.

Argentina: 0-800-666-0052

Australia: 800 507 000

Brazil: 0 800 55 2362

Chile: 800-43-1212

Colombia 01-800-700-1546

India:

Until 6/7/04: 1-600-331121

Starting 6/7/04: Toll-free: 1-600-121214

Toll: 0124-284-5000

Mexico: 001-866-650-5103

New Zealand: 0 800 990 100

Panama: 001-800-201-1984

Peru: 0-800-51-934

Puerto Rico: 1 866 664 6443

Venezuela: 0-800-100-2640

Before requesting support, please try to reproduce and isolate the problem. When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider.
- The actual error message or problem you are experiencing.
- The steps you took to reproduce the problem.
- The phone's electronic serial number (ESN).
To find the ESN select **Menu** → **Phone Info**.

Qualified service

If the problem with your phone persists, return the phone with all accessories and packaging to the dealer for qualified service.

Become a product evaluator

To participate in the testing and evaluation of Kyocera Wireless Corp. products, including cellular or PCS phones, visit beta.kyocera-wireless.com.



093 453 037

Kyocera Wireless Corp.

10300 Campus Point Drive, San Diego, CA 92121
U.S.A.

Visit us at www.kyocera-wireless.com

To purchase accessories, visit
www.kyocera-wireless.com/store

CONTENTS


1	Getting Started	1	Personalizing the screen	41	
	Charging the battery	1	Creating a secure environment	43	
	Using menus	4	Setting message alerts	45	
2	Using Your Phone as a Walkie-Talkie	6	Network settings	45	
	BREWChat call types	6	Connecting to a TTY/TDD device	46	
	BREWChat screens	6	Setting position location	46	
	Walkie-talkie calling basics	7			
	Saving and editing contacts and groups	12	8	Using Voice Recognition	47
	Silencing call alerts	15		Setting up voice dialing	47
	Speakerphone	15		Calling using voice tags	47
	Walkie-talkie icons	16		Using voice features with hands-free car kits	48
3	Making and Answering Calls	17		Training voice recognition	49
	Making a call	17	9	Media Gallery / Fun & Games	50
	Silencing an incoming call	17		My Sounds	51
	Calling emergency services	18		My Pictures	51
	Speed dialing	19		Doodler	52
	Setting up voicemail	20	10	Using Tools	54
	Locking the keypad	21		Scheduler	54
4	Entering Letters, Numbers, and Symbols	23		Alarm Clock	54
5	Storing Contacts	26		Tip Calculator	55
	Saving a contact entry	26		Calculator	55
	Editing or erasing a contact	27		Timer	55
	Finding contact information	28		Stopwatch	55
6	Sending and Receiving Text Messages	30	11	Connecting to the Internet	56
	Sending text messages	30		Using the Web Browser	56
	Retrieving text messages	34	12	Using BREW Apps	58
	Customizing message settings	36		Downloading an application	58
7	Customizing Your Phone	38		Removing an application	59
	Silencing all sounds	39		Checking available memory	60
	Choosing a different ringer	39			
	Adjusting volume	40			
	Using shortcuts	41	Index	61	

1 GETTING STARTED


Your phone comes with a removable lithium ion (LiIon) battery. **Fully charge the battery before using the phone.**

Installing the battery


1. Hold the phone facing away from you.
2. Use your fingernail to pull the circular latch toward the bottom of the phone and pull the battery door away.

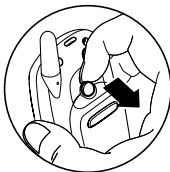

3. Place the battery in the phone casing with the metal contacts toward the top of the phone.

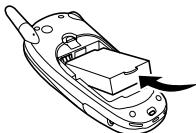


4. Place the battery door notches in the openings near the bottom of the phone.
5. Press the circular latch until it clicks.

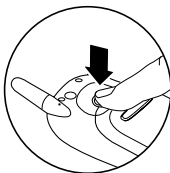

Charging the battery

You must have at least a partial charge in the battery to make or receive calls.

To charge the battery, connect the AC adapter to the jack on the lower right side of the phone, then plug the adapter into a wall outlet.



The battery icon in the upper-right corner of the screen tells you whether the phone is:

- Charging (the icon is animated)
- Partially charged 
- fully charged 

Recharging the battery: You can safely recharge the battery at any time, even if it has a partial charge.

Caring for the battery

General safety guidelines

- Do not take apart, puncture, or short-circuit the battery.
- If you have not used the battery for more than a month, recharge it before using your phone.
- Avoid exposing the battery to extreme temperatures, direct sunlight, or high humidity.
- Never dispose of any battery in or near a fire. It could explode.

Common causes of battery drain

- Playing games.
- Using the Web.
- Keeping backlight on.
- Making and receiving BREWChat (walkie-talkie) calls.
- Using the speakerphone.
- Operating in analog (**A**) mode. Your phone switches between modes to find the best signal. To set your phone to operate in a single mode, select **Menu** → **Settings** → **Network** → **Digital/Analog**.
- Operating in digital mode when far away from a base station or cell site.
- Using data cables or accessories, such as the Hands-free headset.
- Operating when no service is available, or service is available intermittently.
- High earpiece and ringer volume settings.
- Repeating sound, vibration, or lighted alerts.

Performing basic functions

- **Turn the phone on:** Press  and wait until the hourglass icon appears.
- **Turn the phone off:** Press and hold  until the phone beeps or the screen goes blank.
- **Make a call:** Enter the number and press .
- **End a call:** Press  (the red key).
- **Answer a call:** Press  (the green key).

- **Make a BREWChat™ call:** Enter the number and press the walkie-talkie button on the left side of the phone. Hold button to talk. Release button to listen.
- **Answer a BREWChat call:** Press the walkie-talkie button.
- **Turn the speakerphone on or off for BREWChat calls:** Press the speakerphone button on the top of the phone.
- **Access voicemail:** Press and hold  and follow the system prompts.
- **Verify your phone number:** Select **Menu** → **Phone Info**. Press  down to scroll through information.
- **Silence the ringer:** Press , then  to answer.
- **Silence all sounds:** Press and hold  right.
- **Lock the keypad:** Press and hold  left.
- **Access your personal shortcut:** Press  up.
- **Lock the keypad:** Press and hold  left.
- **View your contacts directory:** Press  down.

Getting to know your phone

- ① **Speakerphone button** turns the speakerphone on or off. The loudspeaker is located behind the keypad (item 9).
- ② **Jack for Hands-free headset** (sold separately) only. ⚠
- ③ **Volume control button** adjusts the earpiece or loudspeaker volume.
- ④ **Home screen.** Press  (item 6) to select **Menu**.
- ⑤ **Walkie-talkie button** opens the BREWChat screen, sends a BREWChat call, or answers a BREWChat call. Hold down the walkie-talkie button to speak. Release it to listen.
- ⑥ **OK key** selects a menu item or option.
- ⑦ **Send/Talk key** starts or answers a call.
- ⑧ **Navigation key** scrolls through lists and positions cursor. Also accesses shortcuts from the home screen.
- ⑨ **Keypad** for entering numbers, letters, or symbols.
- ⑩ *** Shift key** changes the text mode in text entry.
- ⑪ **Antenna** does not extend.
- ⑫ **Clear key** erases the last character in text entry, or returns to the previous menu.
- ⑬ **End/Power key** turns the phone on or off, ends a call, or returns you to the home screen.
- ⑭ **Jack for AC adapter** (included). ⚠
- ⑮ **Space # key** enters a space during text entry.
- ⑯ **0 Next key** cycles through word choices during text entry.

⚠ **Warning:** Inserting an accessory into the incorrect jack will damage the phone.



Using menus

The contents of the main menu are as follows:

Recent Calls

Incoming Calls
Outgoing Calls
Missed Calls
Erase Lists

Contacts

View All
Add New
Find Name
Add Voice Dial
Speed Dial List
Voice Dial List
Business List
Personal List
Information

Messages

VoiceMail
Send New
InBox
Net Alerts
OutBox
Saved MsgsGroup Lists
Erase Msgs
Msg Settings

Settings

Silent Mode
Keyboard
Sounds
Display
Security
Call Information
Network

Settings (Continued)

Convenience
Msg Settings
Accessories
Fun & Games
Tetris
Brick Attack
Doodler
My Sounds
My Pictures

Tools

Scheduler
Alarm Clock
Tip Calculator
Calculator
Timer
Stopwatch

Phone Info

Your Number
SW Version
PRI Version
ESN
Technology
SID
Browser Name
Browser Version
Icon Key
(Scroll down to view information.)

Web Browser

Launches the Internet

BREW Apps

MobileShop
BREWChat
Settings
Help

- From the home screen, press  to select **Menu**.
- Press  left, right, up, or down to see menus.*
- Press  to select a menu or menu item.
- Press  up or down to view menu items.
- Press  to back up a menu level.
- Press  to return to the home screen.

* To change the way the menus appear, select **Menu** → **Settings** → **Display** → **Main Menu View**, then select either **Graphic** or **List** and press .

In this guide, an arrow → tells you to select an option from a menu. For example, **Menu** → **Settings** means select **Menu**, then select the **Settings** option.

Understanding screen icons

These icons may appear on your phone's screen.



The phone is operating in 1X digital mode. BREWChat service may be available.



The phone is operating in IS2000 digital mode, but BREWChat service is not available.



The phone is operating in IS95 digital mode. BREWChat service is not available in this mode.



The phone is operating in Analog (FM) mode. BREWChat service is not available in this mode.



The phone is receiving a signal. You can make and receive phone calls. Fewer bars indicate a weaker signal.



A call is in progress.



The phone is not receiving a signal. You cannot make or receive any calls.



The phone is roaming outside of its home service area.



You have a text message, voicemail, or page. (Blinking icon indicates an urgent text message, voicemail, or page.)



The battery is fully charged. The more black bars, the greater the charge.



The alarm clock is set.



The phone is in privacy mode or is accessing a secure Web site.



High-speed (3G) data service is available and active on your phone.



(blinking) The phone is sending high-speed data.



(blinking) The phone is receiving high-speed data.



High-speed data service is available, but the phone is dormant.



The phone is at the home screen. To access the menus, press .



Keyguard is on. The keypad is locked.



The phone is set to light up instead of ring.



The phone is set to vibrate or to vibrate and then ring.



The speakerphone is on for BREWChat calls.



The speakerphone is off for BREWChat calls.



Position location is set to your service provider and to emergency services.



Position location is set to emergency services only.

For additional icons, see “Walkie-talkie icons” on page 16 and “Viewing contacts” on page 29.

2 USING YOUR PHONE AS A WALKIE-TALKIE

You can use your KX440 Series phone with BREWChat™ like a walkie-talkie radio. The BREWChat feature allows you to quickly communicate with an individual or group of individuals.

Note: Your phone may not be compatible with walkie-talkie phones from other service providers. Contact your service provider for more information.

Phone position

For best results, hold the phone facing you with the mouthpiece at least one inch (2.5 cm) away from your mouth.

BREWChat call types

You can make and receive two types of BREWChat calls:

- A **direct call** automatically connects to an individual, a group, or a chat room. Recipients do not have the option to ignore the call. The receiving party hears a beep and your voice through their speakerphone.
- An **invite** sends a text message to an individual, who then has the option to answer or ignore the invite before a conversation begins. You can send an invite to a saved individual BREWChat contact only. To save a BREWChat contact, see page 12.

BREWChat screens

You use the BREWChat screens to place direct calls, send invites, and save BREWChat contacts and groups.

1. To use the BREWChat screens, press the walkie-talkie button once or select **Menu → BREW Apps → BREWChat**.
2. Press  left or right to scroll between three tabs:

 **Calls**—Lists incoming and outgoing BREWChat calls, including missed calls and invites.

Highlight a name, phone number, or group in this list to place a call or save the contact information.

 **Contacts**—Lists all individual contacts you have saved in the BREWChat screens. Highlight a contact name to place a call or invite, or to edit contact information.

 **Groups**—Lists all saved groups of which you are a member and all chat rooms* for which you have a subscription.

Highlight a group name to place a call.
Highlight a chat room name to join a call.

* Chat rooms are established by your service provider. A chat room works like a conference bridge.

You can call into a chat room to join a scheduled call, but participants cannot add members to the call or modify the chat room members. To sign up for chat rooms, contact your service provider.

Selecting items

Selecting items within the BREWChat screens is slightly different from selecting items in the phone's other menus.

When choices (such as **Options** and **Exit**) appear at the bottom of the screen, press  to select one on the left or press  to select one on the right.

When a white menu pops up and covers part of the screen, press  to scroll through the menu. Press  to select an item or  to exit the menu.

Walkie-talkie calling basics

On a BREWChat call, only one person can speak at a time.

When you press the walkie-talkie button to start or answer a call, a tone sounds and the text “Talk now” appears to indicate the audio path is ready and the other party's phone is available.

1. After you hear the tone or see “Talk now,” continue to press the walkie-talkie button as you speak.
2. Release the walkie-talkie button to allow other participants to reply.

When the other parties have finished speaking, a tone sounds and “Press to talk” appears on the screen.

3. Press the walkie-talkie button to speak again.

Note: If you see the message “No one is listening” when you press the walkie-talkie button, all other parties have stopped participating.

4. To stop participating in a call, press  or . The other participants remain in the call.

Note: A call will end automatically if all participants' phones are idle for a specific amount of time set by your service provider's network.

Calling an individual

You can place a direct BREWChat call to an individual who also has BREWChat service from your service provider.

You can call an individual in several ways:

- Enter a phone number.
- Select a contact saved in the BREWChat Contacts list.
- Select a contact saved in your phone's Contacts directory.
- Select a recent call from the BREWChat Calls list.

Note: The BREWChat Contacts list and the phone's Contacts directory are two different lists. To save a BREWChat contact, see “Saving and editing contacts and groups” on page 12. To save a contact in your phone's Contacts directory, see “Saving a contact entry” on page 26.

Entering a phone number

Start at the home screen.

1. Enter a ten-digit phone number, including area code.
2. Press the walkie-talkie button.

Selecting a contact saved in the BREWChat Contacts list

Start at the home screen.

1. Press the walkie-talkie button.
2. Press  right to highlight .
3. Press  up or down to highlight the contact name.
4. Press the walkie-talkie button.

Selecting a contact saved in the phone's standard Contacts directory

Start at the home screen.

1. Press  down to highlight the contact name.
2. Press the walkie-talkie button.

Selecting a phone number from the BREWChat Calls list

Start at the home screen.

1. Press the walkie-talkie button.
2. Make sure  is highlighted.
3. Press  up or down to highlight the phone number or name from the list.
4. Press the walkie-talkie button to start the call.

Redialing the last BREWChat call

- Press the walkie-talkie button twice.

Adding a participant to a call

You can add a saved BREWChat contact to your call.

1. During the BREWChat call, press  to select **Options** → **Add participant**.

The Add to Call screen lists your contacts.

2. Scroll through the list and highlight the contact you want to add to the call.
3. Press  to select **Add**.
4. Press the walkie-talkie button.

The new participant receives the barge call notification.

“Group Call” appears at the top of the phone screen for all participants.

Note: To save the group you created, see page 13.

Calling a group or chat room

You can place a direct call to a group or chat room in several ways:

- Select a saved group or chat room.
- Select a recent group call.
- Select individual contacts one at a time to form a group.

Calling a group or chat room from the Groups list

1. Press the walkie-talkie button.
2. Scroll right to highlight .
3. Press  up or down to highlight the name of the saved group or chat room.
4. Press the walkie-talkie button.

Calling a group from the BREWChat Calls list

You can call a recent group from the Calls list if the conference ID has not expired and the group has not been erased from the network.

1. Press the walkie-talkie button.
Make sure  is highlighted.
2. Press  up or down to highlight the call from the list. A call to an unsaved group appears as “Group Call.”
3. Press the walkie-talkie button.

Note: To save the group, see page 14.

Calling multiple contacts as a group

You can place a call to a group of individual contacts without saving them as a group.

1. Press the walkie-talkie button.
2. Highlight .
3. Select **Options** → **Create a group**.
The Add Members screen appears. Your contacts are listed with empty check boxes.

4. To add a member for the group call, highlight the contact name and press  twice to select **Add**. A check mark appears next to the contact name.
5. Highlight and add one contact at a time until you have included all members for this call.
6. To call, press the walkie-talkie button.

Note: To save the group before calling, skip step 6. Select **Options** → **Save Group**. Enter the group name in the Name field and select **Save**. To enter text, press a key once for the first letter on the key, twice for the second letter, and so on. Wait for the cursor to move right and enter the next letter.

7. To exit the Add Members screen, press .

Note: To save the group during the call, see page 13.

Receiving a call

When your phone receives a direct call, it sounds a tone and the caller's name or phone number appears on the screen. The caller's voice comes through the speakerphone. (If the phone is in silent mode, the phone vibrates and the caller's voice comes through the earpiece.)

1. Press the walkie-talkie button.

If you are included in a group call, the word “Group” appears on the screen along with the caller's contact name or phone number.

To view a list of participants in a group call: Press  to select **Options** → **Get List**.

2. To speak, wait for the text “Press to talk,” then press and hold the walkie-talkie button.
3. To allow another party to speak, release the walkie-talkie button.

Blocking calls

If you have received or missed a call from a specific phone number, you can set the phone to refuse BREWChat calls and invitations from that number.

Note: You cannot block calls from a phone number that is not available to you (for example, a private phone number) or from a group.

To block calls from a phone number

1. Press the walkie-talkie button.
Make sure  is highlighted.
2. Highlight the phone number or name.
3. Press  to select **Options** → **Get Details**.
4. Press  to select **Options** again.
5. Select Block Address from the pop-up menu.
6. At the “Block” prompt, press  to select **Yes**.
You return to the details screen. To see if a number is blocked, you must view the Blocked List (See the following procedure).

To view blocked phone numbers and unblock them

1. Press the walkie-talkie button.
Make sure  is highlighted.

2. Press  to select **Options** → **View Blocked List**.

A list of blocked numbers appears with check marks.

3. You can exit or unblock a phone number.
 - To exit without making changes, press . You return to the Calls screen.
 - To unblock a number, highlight the number or contact name.
4. Press  to select **Unblock**.
5. When finished, press  to select **Back**.
An info message appears indicating that the blocked address list has been changed.
6. Press .
You return to the Calls screen.

Sending an invite

You can send an invite to any saved individual contact which appears in your BREWChat Contacts list who has walkie-talkie service from your service provider.

When you send an invite, the other party's phone sounds a tone and a brief text invite appears on the phone's screen. The other party may decline the invite or answer the call.

Start at the home screen.

1. Press the walkie-talkie button.
2. Highlight .

3. Scroll through the list and highlight the contact you want to invite.
4. Press  to select **Options** → **Invite**.
“Sending Invite” appears on the screen and a tone sounds, then “Call invite sent” appears.
 - If the other party accepts the invite, their contact name appears on the screen and you will hear them speaking.
 - If the other party chooses not to accept the call, “Invite Declined” appears on the screen.
 - If the other party’s phone is not available or if the call fails, “Party could not be reached” appears on the screen.
5. If the other party accepts, press and hold the walkie-talkie button to talk when “Press to talk” appears on your phone screen.

Receiving an invite

When your phone receives an invite, the phone beeps (vibrates if in Silent mode). The text “Call Invitation” appears on the screen with the name or phone number of the caller.

- To accept the invite, press and hold the walkie-talkie button, and then speak.
- To clear the invite information from the screen, press  to select **Clear**.
- To send a text message to the other party that you cannot talk now, press  to select **Decline** or press .

Note: If an invite comes in while you are on a BREWChat call, the invite does not appear on your phone until your current call has ended.

Viewing recent BREWChat call details

Four types of BREWChat calls are listed in the Calls list. Details on the last 20 calls of each type are listed. Icons indicate the types of calls in the list.

-  Incoming call
-  Outgoing call
-  Invite (incoming or outgoing)

Viewing recent BREWChat calls

1. Press the walkie-talkie button.
Make sure  is highlighted.
2. Press  up or down to highlight a recent call from the list.
3. Press  to select **Options** → **Get Details**.
The screen shows the call type; the name or number of the contact, group, or chat room (if available); and the time date, and duration of the call.
4. To exit, press  to select **Back**.
-or-
To see more information about the call, or to modify caller information, press  to select **Options**.

5. Select an option:

(Options vary depending on the call you have selected.)

- **View Address**—View the caller's phone number.
- **Block Address/Unblock Address**—Set your phone to refuse calls from the phone number. (The phone will appear as unavailable to the caller.
- **Invite**—Send an invitation to the contact.
- **Get Details**—View and edit information about the contact.
- **Delete Calls List**—Delete the entire Calls list.
- **View Blocked List**—View the list of blocked phone numbers or unblock a phone number.
- **View Participants**—View a list of participants in the selected group call.

Erasing the BREWChat Calls list

You can erase the record of all calls stored in the BREWChat Calls list:

1. Press the walkie-talkie button.
Make sure  is highlighted.
2. Press  to select **Options** → **Delete Calls List**.
3. At the “Delete?” confirmation message, press  to select **Yes**.
All calls are erased. The message “No calls stored” appears on your screen.
Note: You cannot redial the last call.
4. Press  to select Exit.

Saving and editing contacts and groups

The BREWChat Contacts list includes the contacts you have saved in the BREWChat Contacts list using the BREWChat screens. This list does not include any contacts you have saved in the phone's Contacts directory (described on page 26).

Saving an individual BREWChat contact

Saving a phone number as a contact

1. Start at the home screen.
2. Press the walkie-talkie button.
3. Highlight .
4. Press  to select **Options** → **Add new address**.
5. Enter a name for the contact. To enter text, press a key once for the first letter on the key, twice for the second letter, and so on. Wait for the cursor to move right and enter the next letter.
6. Press  to select **Next**.
7. Enter the ten-digit phone number, including area code, in the BREWChat Address screen. (The phone number appears in this field if you chose to save a number from the Calls list.)
8. Press  to select **Save**.
You return to the Contacts screen. The new contact is highlighted.

Saving a contact from the BREWChat Calls list

Start at the home screen.

1. Press the walkie-talkie button.
Make sure  is highlighted.
2. Press  up or down to highlight the recent call from the list.
3. Press  to select **Options** → **Get Details**.
4. Press  to select **Options** → **Save Address**.
By default, the phone number appears in the Name field.
5. To change the name, press  to remove the numbers, then enter a name for the contact.
To enter text, press a key once for the first letter on the key, twice for the second letter, and so on. Wait for the cursor to move right and enter the next letter.
6. Press  to select **Next**.
7. Enter the ten-digit phone number, including area code, in the BREWChat Address screen.
(The phone number appears in this field if you chose to save a number from the Calls list.)
8. Press  to select **Save**.
You return to the Contacts screen. The new contact is highlighted.

Modifying or erasing an individual BREWChat contact

Start at the home screen.

1. Press the walkie-talkie button.
2. Highlight .
3. Press  to select **Options**.
4. Select an option:
 - To modify the contact name or phone number, select **View**.
Then select **Options** → **Edit**.
 - To erase the entire contact, select **Delete**.
5. Make your changes and press  to select **Save** or **Delete**.

Saving a BREWChat group

You can place a BREWChat call to any group you have created or saved in the BREWChat Groups list.

Note: You can also place a call to an individual contact and add participants while the call is in progress (see page 8).

Saving a group during a call

1. During a group call, press  to select **Options** → **Get List**.
The message “Retrieving Participant List” appears, then the Group Call information screen appears.
2. Select **Options** → **Save**.

3. Enter the group name in the Name field.
Note: To enter text, press a key once for the first letter on the key, twice for the second letter, and so on. Wait for the cursor to move right and enter the next letter.
4. Select **Save**.
5. To return to the call information screen, press .

Saving a group from the BREWChat Calls list

You can save a group from the Calls list as long as the conference ID has not expired and the group has not been deleted from the network.

1. Press the walkie-talkie button.
Make sure  is highlighted.
2. Highlight a group call from the list.
Unsaved groups appear as “Group Call.”
3. Press  to select **Options** → **Get Details**.
The call details screen appears.
4. Press  to select **Options** → **View Participants**.
A list of participants appears in the Group Call information screen.
5. To save the group as it is, press  to select **Options** → **Save**.
6. Enter a name for the group.
Note: To enter text, press a key once for the first letter on the key, twice for the second letter, and so on. Wait for the cursor to move right and enter the next letter.

7. Press  to select **Save**.
The Group Call information screen appears again. The group has been saved.
8. Press  to exit.

Saving multiple contacts as a group

You can place a call to a group of individual contacts without saving them as a group.

1. Press the walkie-talkie button.
2. Highlight .
3. Select **Options** → **Create a group**.
The Add Members screen appears. Your contacts are listed with empty check boxes.
4. To add a member for the group call, highlight the contact name and press  twice to select **Add**.
A check mark appears next to the contact name.
5. Highlight and add one contact at a time until you have included all members for this group.
6. Select **Options** → **Save Group**.
7. Enter the group name in the Name field and select **Save**.
Note: To enter text, press a key once for the first letter on the key, twice for the second letter, and so on. Wait for the cursor to move right and enter the next letter.
The contact is saved. You return to the Add Members screen.
8. To exit the Add Members screen, press .

Modifying or erasing a group

Start at the home screen.

1. Press the walkie-talkie button.
2. Highlight .
3. Highlight the group from the list.
4. Press  to select **Options**.
5. Select an option:
 - To modify the group name or the list of group members, select **View**. Then select **Options**. Options are **Remove contacts**, **Add New Members**, and **Edit Name**.
 - To erase the entire group, select **Delete**.
6. Make your changes and press  to select **Save** or **Delete**.

Silencing call alerts

If your phone is set to silent mode, it vibrates to alert you of incoming BREWChat direct calls. The speakerphone is turned off, so the caller's voice comes through the earpiece. To use silent mode, see “Silencing all sounds” on page 39.

Speakerphone

BREWChat calls come through the speakerphone behind the number keys on your phone.

Note: If a headset or hands-free car kit (sold separately) is connected to the phone, calls come through the hands-free device and you speak through the headset or microphone. However, you must press the walkie-talkie button on the phone to participate in BREWChat calls.

Adjusting speakerphone volume

- Press the volume key on the left side of the phone up or down during the call.

Turning speakerphone off and on

- To turn speakerphone off for BREWChat calls, press the speakerphone button on the top of the phone.  appears at the top of the screen. The other party's voice comes through the earpiece.

The speakerphone is off for all BREWChat calls until you turn it on again.

- To turn speakerphone on, press the speakerphone button.  appears at the top of the screen.

Walkie-talkie icons

These icons may appear on your phone's screen as you place or receive a BREWChat call.



BREWChat service may be available



BREWChat service currently is not available



Calls screen



Contacts screen or individual person



Groups screen or group



Chat room



invite



missed call



incoming call



outgoing call



Speakerphone is on



Speakerphone is off

3 MAKING AND ANSWERING CALLS

This chapter discusses phone, fax, and data calls on your KX440 Series phone. For information about walkie-talkie radio calls, see “Using Your Phone as a Walkie-Talkie” on page 6.

Making a call

1. Make sure you are in an area where the signal can be received. Look for the  symbol on the home screen.

Note: The more bars you see in the  symbol, the clearer the reception. If there are no bars, try to move to where the reception is better. If your phone cannot locate a signal for 15 minutes, it changes to Power Save mode. If you see the text “Power Save Mode” and  on the screen, press any key to return to normal operating mode.

2. Enter the phone number.
3. Press .
4. Press  to end the call.

Redialing a number

To redial the last number called, press  three times. If you see a message prompting you to speak a name, press  again.

Calling a saved number

If you have already saved a phone number, you can use the phone's Contacts directory to find it quickly.

1. Select **Menu** → **Contacts** → **View All**.
This brings up a list of all saved contacts.

2. Scroll through the list, find the contact you want, and press  to dial the number.

For more about finding contact information, see page 28.

Tip: To call a saved number using your phone's voice recognition feature, see “Calling using voice tags” on page 47.

Answering a call

When a call comes in, the phone rings, vibrates, or lights up (depending on your settings), and a dancing phone icon appears. The phone number of the caller also appears, if it is not a restricted number. If the number is stored in your Contacts directory, the contact name also appears.

- To answer the call, press .
- If you do not wish to answer the call, select **Silence** or **Ignore** and press .
If you have voicemail service, Silence mutes the ringer and sends the caller to voicemail. Ignore sends the caller directly to voicemail. If you do not have voicemail service, selecting Silence or Ignore ends the call.

Silencing an incoming call

- To silence an incoming call quickly, press . Then press  to answer the call.
This action silences the current call only. The next call will ring as normal.

Adjusting the volume during a call

- To adjust the earpiece volume during a call, press  up or down or press the volume buttons on the side of the phone.

Calling emergency services

Note: Regardless of your 3-digit emergency code (911, 111, 000, 999, etc.), your phone will operate as described below.

- Dial your 3-digit emergency code and press .

You can call the code even if your phone is locked and your account is restricted. When you call, your phone enters **Emergency mode**. This enables the emergency service exclusive access to your phone to call you back, if necessary. To make or receive regular calls after dialing the code, you must exit this mode.

To exit Emergency mode

When you have completed the emergency call:

1. Press  to select **Exit**.
2. Press  again to confirm your choice.

Note: To determine who has access to your location, see “Setting position location” on page 46.

Using your phone in an airplane

Note: Please check with uniformed crew personnel before operating your phone in Airplane mode.

While in an airplane, it is normally required that you turn off your mobile phone, because it emits RF signals that interfere with air traffic control. You can, however, keep your Kyocera KX440 Series phone powered on if you set it to Airplane mode.

In Airplane mode, your phone does not emit RF signals. You cannot make or receive regular phone calls, send text messages, or use the Web, but you can play games, set the clock, and make emergency calls to designated emergency services.

To set Airplane mode

1. Select **Menu** → **Settings** → **Convenience** → **Airplane Mode**.
2. At the message, press .
3. Highlight an option and press .
 - **Enabled**—Activate Airplane mode.
 - **Disabled**—Deactivate Airplane Mode and return the phone to normal state.

Dealing with missed calls

When you have missed a call, “Missed” appears on your screen unless the caller leaves a voicemail.

- To view the caller’s number or name, select **Missed Calls**. In the Recent Calls list, the missed call is indicated with a flashing .
- To clear the screen, press  or .
- If the caller left a voicemail message, select **Call**.

Note: To view missed BREWChat calls, press the walkie-talkie button and select . For more information, see page 11.

Setting missed call alerts

You can set an alert to beep every five minutes after you have missed a call.

- Select **Menu** → **Settings** → **Sounds** → **Missed Call** → **Enabled**.
- To turn off the alert when it rings, press  or .
- To cancel the alert, select **Menu** → **Settings** → **Sounds** → **Missed Call** → **Disabled**.

Viewing recent call details

Details on the last 29 calls you made or received are stored in the lists under the Recent Calls menu.

You can get details on the caller's name and phone number, along with the time and length of the call. Icons indicate the types of calls in the list.



Outgoing call



Incoming call



Forwarded call



Three-way call



Missed call (flashing)

Note: These lists do not include BREWChat calls. To view recent BREWChat call details, see page 11.

Viewing recent calls

1. Select **Menu** → **Recent Calls**.
2. Select a list: **Incoming Calls**, **Outgoing Calls**, **Missed Calls**, or **Erase Lists**.
3. Select a recent call item.

4. Select an option:

- **Time**—Show the time of the call.
- **Number**—Show the caller's number (for an incoming call), or the number you called (for an outgoing call).
- **Prepend**—Place the cursor at the beginning of the phone number so you can add an area code, if you plan to save the number as a contact.
- **Save New**—Save the phone number as a contact.
- **Add to**—Add the phone number to a saved contact.

Note: If the phone number has been classified as “secret,” you must enter your four-digit lock code to view or edit it. For information on the lock code, see “Changing your lock code” on page 44. To classify a phone number as secret, see “Saving a contact entry” on page 26.

Erasing recent calls

1. Select **Menu** → **Recent Calls** → **Erase Lists**.
2. Select an option: **Incoming Calls**, **Outgoing Calls**, **Missed Calls**, or **Erase All**.
3. Press  right and press  to select **Yes**.

Speed dialing

Speed dialing allows you to quickly dial a stored phone number by entering a one- or two-digit speed dialing location number and pressing .

Note: Before you can use speed dialing, you must save a phone number as a contact and assign a speed dial location to it.

- To save a phone number as a new contact and add a speed dial location, see “Saving a contact entry” on page 26.
- To add a speed dial location to a saved contact, see “Editing or erasing a contact” on page 27.

Using speed dialing

To call a contact that has a speed dial location:

- From the home screen, enter a one- or two-digit speed dialing location and press .

1-Touch Dialing

1-Touch Dialing is the fastest way to speed dial a contact that has a speed dial location.

Note: You must (1) enable 1-Touch dialing on your phone and (2) have a speed dial location assigned to a contact. To assign a speed dial location to a contact see “Saving a contact entry” on page 26 or “Editing or erasing a contact” on page 27.

Enabling 1-Touch dialing

1. Select **Menu** → **Settings** → **Convenience** → **1-Touch Dialing** → **Enabled**.
2. Press .

Using 1-Touch Dialing

To call a contact that has a speed dial location:

- From the home screen, press and hold a speed dialing location.

If it is a two-digit location, press the first digit briefly, then press and hold the second digit. For example, if the speed dialing location is 15, press  briefly, then press and hold .

Setting up voicemail

Before your phone can receive voicemail messages, you must set up a password and record a personal greeting with your service provider. When you have set up your voicemail, all unanswered calls to your phone are automatically transferred to voicemail, even if your phone is in use or turned off.

- Contact your service provider to set up your password and personal greeting.

Checking voicemail messages

When a voice message is received, your screen will display a notification: “New Message [x] Voicemail.” This text will remain for about five minutes. After that, look for the  symbol at the top of your screen. The symbol flashes if the message is urgent.

If you see “New Message” on your screen

1. Press  to select **Call**. This initiates a call to your voicemail number.
2. Follow your service provider’s method to retrieve the message from their voicemail system.

If you see the symbol

1. Press  to initiate a call to your voicemail number.
2. Follow the prompts to retrieve the message.

Note: You can set the phone to beep, light up, or play a tune every five minutes to remind you that you have voicemail.

Locking the keypad

The Keypad locks your keypad and side buttons on your phone to prevent accidental keypresses when the phone is turned on and a call is not in progress. You can still answer or silence an incoming call.

- To lock the keypad, press and hold  to the left.
- To unlock the keypad, press    in this order.

Changing the keyguard setting

1. Select **Menu** → **Settings** → **Keyguard**.
2. Highlight an option. You can set the phone to lock the keypad immediately, or automatically if no key is pressed after 30 seconds, 1 minute, or 5 minutes.
3. Press  to save.

Tracking calls

You can track the number and duration of calls made and received on your phone.

1. Select **Menu** → **Settings** → **Call Information**.

2. Select a timer:

- **Recent Calls**—Tracks all calls made and received by your phone since this timer was last reset. To reset this timer, highlight **Reset** and press .
- **All Calls Timer**—Tracks all calls made and received by your phone. This timer cannot be reset.

Timing your calls

You can set your phone to beep 10 seconds before each minute passes when you are on a call.

- Select **Menu** → **Settings** → **Sounds** → **Minute Alert** → **Enabled**.

Setting roaming alerts and ringers

Setting an alert for roaming

You can set your phone to alert you with beeps when you roam outside of your home service area.

1. Select **Menu** → **Settings** → **Network** → **Roam/Svc Alert**.
2. Select an option and press .
 - **When no svc** alerts you with three tones decreasing in pitch when service is lost and three tones increasing in pitch when service is acquired again.
 - **Roam Change** alerts you with two decreasing tones when roaming service is acquired and three increasing tones when home area service is acquired again.

- **Any Change** alerts you with three increasing tones if there is a change in roaming service or three decreasing tones if the phone loses service.

Setting the roam ringer

You can set a ringer to indicate when an incoming call will be subject to roaming charges.

1. Select **Menu** → **Settings** → **Sounds** → **Roam Ringer**.
2. Highlight **Enabled** and press . You'll hear a sample of the ringer.
3. Press  to set the ringer.

Setting Call Guard to avoid roaming calls

You can set your phone to warn you before you answer or place a call while roaming.

- Select **Menu** → **Settings** → **Convenience** → **Call Guard** → **Call prompt**.

The phone makes a distinctive ring to indicate an incoming call while you are roaming, and you must press  to accept the call or to place a call while roaming.

Controlling network roaming

Specifying digital or analog mode

You may force the phone into either digital or analog mode. This is useful if you are in an area that borders on digital service and the automatic feature is causing the phone to keep switching between modes.

1. Select **Menu** → **Settings** → **Network** → **Digital/Analog**.
2. Select an option and press .
 - **Automatic** automatically switches the phone between digital and analog.
 - **Analog only** sets the phone to work in analog mode only.
 - **Analog call** forces a call into analog mode for the duration of the next call.
 - **Digital only** sets the phone to work in digital mode only.

Turning roaming on or off

This setting allows you to control the phone's roaming feature by specifying which signals the phone will accept.

1. Select **Menu** → **Settings** → **Network** → **Roam Option**.
2. Select an option and press .
 - **Automatic** (recommended setting) accepts any system the phone service provides.
 - **No Roaming** prevents you from making or receiving calls outside of your home service area.


Note: If your phone has more than one setting for Automatic, contact your service provider to determine which one to use.

4 ENTERING LETTERS, NUMBERS, AND SYMBOLS

You can enter letters, numbers, and symbols in contacts, text messages, and your banner.

Understanding text entry screens

The current text entry mode (and capitalization setting, when applicable) are indicated by icons.

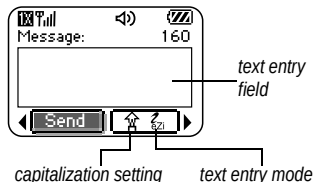

Text entry modes

There are four text entry modes:

123 Number mode

aBc Normal text mode

eZi Rapid text entry mode

&?! Symbol mode

Note: The mode you start in depends on the task you are doing. For example, when entering a phone number, you're in number mode. When entering a name for a contact, you're in normal text mode.

Entering numbers

- To enter a number while in **123** mode, press a number key once.
- To enter a number while in **aBc** or **eZi** mode, press and hold a number key until the number appears on the screen.

aBc Entering words letter by letter

Use normal text mode to enter letters.

- Press a key once for the first letter, twice for the second letter, and so on. If your phone is set to Spanish, French, or Portuguese, accented letters are available.
- Wait for the cursor to move right and enter the next letter.

eZi Entering words quickly

When you press a series of keys using **eZi** mode, **eZi** checks its dictionary of common words and guesses at the word you are trying to spell.

- For each letter of the word you want, press the key once. For example, to enter the word "any" press: **(2)ABC** → **(M)ND6** → **(W)XY9**.
- If the word doesn't match what you want, press **(Q)HKEY** to look at other word matches.
- When you see the word you want, press **(9) #SPACE**.

Quick reference to text entry

This table gives general instructions for entering letters, numbers, and symbols.

To...	Do this...
Enter a letter	Use a_bc mode and press a key until you see the letter you want. For more information, see page 23.
Enter a number	Use 123 mode and press a key once to enter its number. For more options, see page 23.
Enter a symbol	Use a_bc mode and press  until you find the symbol you want. See page 24.
Enter a space	Press  .
Erase a character	Press  .
Erase all characters	Press and hold  .
Move the cursor right or left	Press  up or down.
Change text entry modes	Press and hold  .
Capitalize the next letter	In a_bc mode, press  . Choose A .
Lowercase the next letter	In a_bc mode, press  . Choose a .
Capitalize the first letter of each word	In a_bc mode, press  . Choose  .
Highlight an option at the bottom of the screen	Press  left or right.

5 STORING CONTACTS

Use your phone's Contacts directory to store information about a person or company. Your phone can hold, on average, about 200 phone numbers.

Note: These contacts do not appear in your BREWChat Contacts list. For more information, see page 12.

Saving a contact entry

To save a contact, take these steps:

1. From the home screen, enter the phone number you want to save.
Tip: Enter the area code with the phone number so that you can dial it from any service area.
Note: To save a contact without entering a phone number, select **Menu** → **Contacts** → **Add New**, select an option, and skip to step 3.
2. Press  to select **Save New**.
3. Enter a name for the contact. If you need to learn how to enter letters, see page 23.
Either save the contact now or assign options. To save now, press  to select **Save**.
-or-
To assign options, press  right twice, then press  to select **Options**. Press  up or down to highlight an option:
 - **Save**—Save the information and return to the home screen.

- **Assign Ringer** or **Unassign Ringer**—Select or remove a ringer to identify an incoming call from this contact.
- **Assign Picture** or **Unassign Picture**—Select or remove a picture to identify an incoming call from this contact.
- **Number Type**—Select **work**, **home**, **mobile**, **pager**, or **fax**. The number type appears as an icon next to the number in the Contacts directory. For icons, see page 29.
- **Add Voice Dial**—Speak the name of the contact person for this number so that you can dial it using voice recognition (VR). For more information, see page 47.
- **Speed Dialing**—Select a speed dialing location from the list.
- **Secret**—Select **Yes** to lock the phone number. If a phone number is locked, you must enter your four-digit lock code (see page 44) to view or edit the number.
- **Primary Number**—Classify this number as the primary number for the contact.
- **Classify Contact**—Classify the contact as **Personal** or **Business**. (See page 40 to set the phone to ring differently for personal and business calls.)

4. Press  to select **Save**. A check mark and the word “Saved” appear.

Adding a code or extension

When you save the phone number of an automated service, you may include a pause where your phone would stop dialing; for example, where you would wait to dial an extension.

1. Enter the first portion of the phone number.
2. Press  right to scroll through the options at the bottom of the screen.
3. Press  to select a type of pause.
 -  A **Time Pause**—Stops dialing for two seconds, then continues to dial.
 -  A **Hard Pause**—Stops dialing until you select **Release**.
4. Enter the remaining numbers.
5. Select **Save New**.

Editing or erasing a contact

To make changes to a contact, take these steps. (To erase all saved contacts, see page 45.)

1. Select **Menu** → **Contacts**.
2. Select **View All** or **Find Name** to find the contact you want to edit.
3. Highlight the contact to edit and press .
4. Select **Options**.
5. Highlight an option and press  to select it:
 - **Add New** to add a number, address, or note.
 - **Assign Ringer** or **Unassign Ringer** to select or remove a ringer to identify an incoming call from this contact.

- **Assign Picture** or **Unassign Picture** to select or remove a picture to identify an incoming call from this contact.
 - **Erase Contact** to erase the entire contact.
 - **Edit Name** of the contact.
 - **Classify Contact** as personal or business.
 - **Exit** without making changes.
6. Enter the new information.
 7. Press  to select **Save**, if necessary.

Editing a phone number

1. Select **Menu** → **Contacts**.
2. Select **View All** or **Find Name** to find the contact you want to edit.
3. Highlight the contact to edit and press .
4. Press  down to highlight the phone number you want to edit and press .
5. Highlight an option for the phone number and press :
 - **Send Text Msg**—Send a text message to the phone number you selected.
 - **View Number**—See the phone number you selected.
 - **Add Voice Dial**—Speak the name of the contact person for this number so that you can dial it using voice recognition (VR). For more information, see page 47.
 - **Speed Dialing**—Assign or remove the location you use to speed dial the number.

- **Edit Type**—Assign a type: **work**, **home**, **mobile**, **pager**, or **fax**. The type icon appears next to the phone number in the Contacts directory.
 - **Erase Number**—Erase the number from the contact.
 - **Erase Voice Dial**—Erase the voice dial name associated with the number.
 - **Edit Number**—Change the phone number.
 - **Edit Voice Dial**—Record a new voice dial name.
 - **Secret**—Make the number secret so that it will not appear on the screen until the lock code is entered. Secret numbers can be called without a lock code. (For more information, see “Restricting calls” on page 45.)
 - **Primary Number**—Make this number the first one that shows up when you open the contact.
 - **Prepend**—Move the cursor to the beginning of the number so you can add the area code.
 - **Exit**—Exit without making changes.
6. Enter the new information and follow the prompts.
 7. Press  to select **Save**, if necessary.

Finding contact information

To find a phone number or contact, either search the Contacts directory or use Fast Find.

Searching the Contacts directory

1. Select **Menu** → **Contacts**.
2. Select a search method:
 - **View All**—List all contacts saved in your phone’s Contacts directory.
 - **Find Name**—Locate a specific name. Enter part of the contact name, then select **Find**.
 - **Speed Dial List, Voice Dial List, Business List, or Personal List**—Select a contact from a list.
3. Scroll down until you find the name you want, then press .
 - To call the contact, highlight the number and press .
 - To display contact information, press .

Setting Fast Find

With Fast Find, you press one or two keys to view close matches of the number you are looking for.

- From the home screen, select **Menu** → **Settings** → **Convenience** → **Fast Find** → **Enabled**.

Using Fast Find

1. From the home screen, press the keys corresponding to the letters of the name you want to find. A matching contact or speed dial entry appears. Press  down to scroll through matching entries.
2. View the name you want, then press  to call the number or press  to view contact details.

Viewing contacts

The following icons may appear next to information in your phone's contact entries.



work



email address



home



street address



mobile



Web page URL



pager



note



fax

6 SENDING AND RECEIVING TEXT MESSAGES

This chapter describes how to send, receive, and erase text messages from your phone. For information on voicemail messages, see page 20.

Important: The features and menus described in this chapter may vary depending on services available in your area. In addition, usage charges may apply to each message.

Sending text messages

You can only send text messages to phones that are capable of receiving them, or to email addresses.

Writing a message

To send a text message to a single recipient:

1. Select **Menu** → **Messages**.
2. Highlight **Send New** and press **OK**.
3. Choose a method to enter the recipient's phone number or email address:
 - Select a saved number from the **Recent List** or **Contacts List**, or select a **Group List** you have created. For more about group lists, see page 36.
 - Enter a **New Address** manually.
(To learn how to enter text, see page 23.)
4. To add another recipient to this message, choose a method:
 - Press  right to select **Options**. Then select **Recent List**, **Contacts**, or **Group Lists**.

- Enter a space or comma after the first number. Then enter another recipient manually.

Note: You can send a message to up to 10 contacts at once. The messages are sent one at a time, once to each addressee.

5. When you are done entering addresses, highlight **Next** and press .
6. Enter the message. To learn how to enter text, see page 23. To add special features such as smiley faces, see “Including pictures, sounds, and prewritten text” on page 30.

Note: You may be charged for more than one message if your message exceeds a certain number of characters. For more information, see “Understanding appended messages” on page 32.
7. When you have completed the message, press  to select **Send**.

Including pictures, sounds, and prewritten text

You may include smiley faces, sounds, and prewritten text in your text messages.

1. Create a text message and enter addresses. (See page 30.)
2. Select **Next** to advance to the message text entry screen.

3. From the text entry screen, press  right twice, select **Options** → **Insert** and select from the options:
 - **My Sounds**—Add a sound or melody. Highlight one from the list and press  to select **Insert**.
 - **My Pictures**—Add a graphic you have received in a text message, created using Doodler™, or downloaded to your phone. Press  right or left to scroll through graphics and press  to select **Insert**.
 - **Emoticons**—Select a smiley face icon. If the recipient's phone does not support the same technology as your phone, the icons will appear to them in a simplified form.
Tip: Press and hold  to cycle through emoticons while in the text entry screen. Highlight one and press  to select **Insert**.
 - **AutoText**—Select a prewritten message. Highlight one from the list and press  to select **Insert**. (To edit or create new prewritten messages, see page 37.)
 - **Contacts**—Add information about a saved contact. Highlight the contact from the list and press  to insert it.
4. When you have completed the message, you can send it immediately or set sending options. To send it immediately, press  to select **Send**. To set sending options, see the following procedure.

Setting sending options

When you are ready to send a message, you have several options for how and when you want the message to be received.

1. Once you have completed the message, press  right to highlight **Options** and press  . Then choose from the list:
 - **Insert**—Enhance your message with sounds, graphics, smiley faces, prewritten text, or contact information. See options under “Including pictures, sounds, and prewritten text” on page 30.
 - **Add Address**—Return to the “To” screen to add another recipient without losing the message text. Enter the new address, then select **Next** to return to the message entry screen.
 - **Msg Receipt**—Alerts you when the recipient has received your message. (Service may not be available to you. Check with your service provider.)
 - **Set Priority**—Label the message as “Urgent.”
 - **Callback Number**—Include a callback number with the message to let the recipient know at what number they can call you back. Select **Yes** to include your own number, or **Edit** to enter a different callback number.
 - **Send Later**—Schedule when to send the message.

- **Save Message**—Save the message in your **Saved** folder. This prevents the message from being deleted if you have activated AutoErase, and enables you to send the message to others.
 - **Save AutoText**—Save the message you have just entered as a prewritten message, then return to the message entry screen so you can send the message.
2. When you have finished setting options, press  to return to the message window.
 3. Highlight **Send** and press .

Adding a signature

This setting allows you to create signature text. The signature does not appear in the message creation screen; however, the signature is included at the end of all outgoing messages.

To create a signature


1. Select **Menu** → **Settings** → **Msg Settings** → **Signature**.
2. Enter your signature in the text field.
3. Press  to save the setting.

Note: The signature text is tallied by the character counter because the signature is included in the text field.

If you cannot send messages

You may not be able to send or receive messages if your phone's memory is nearly full, or if digital service is not available at the time. To free up memory, erase old messages. See “Erasing messages” on page 35.

Understanding appended messages



If you go over the character limit for a single message, the phone may automatically append an empty segment to your message to make space.

Important: You are charged for each message segment. When you start a message, the maximum character limit (“160” in the example) appears above the text entry screen. This number counts down as you enter characters, until it reaches 0. If you continue to enter text after this counter reaches 0, a message segment may be appended. If a segment is appended, a message will appear on the phone screen.

Receiving incoming calls while creating messages

You may receive standard or BREWChat calls while creating messages.

BREWChat barge call

When your phone receives a BREWChat barge call, it sounds a tone and you hear the caller's voice through the speakerphone.

- To speak, press and hold the walkie-talkie button. To listen, release the walkie-talkie button. To end the call, press  or .

Once the BREWChat call has ended, your phone returns to the text message screen that was open.

BREWChat invite

When your phone receives a BREWChat invite, it sounds a tone. The message “Call Invitation” appears on the screen with the phone number or contact name of the caller.

- To accept the invite, press and hold the walkie-talkie button, and then speak.
- To clear the invite information from the screen, press  to select **Clear**.
- To send a text message to the other party that you cannot talk now, press  to select **Decline** or press .

Once the BREWChat call has ended or you have declined the invite, your phone returns to the text message screen that was open.

Standard call

When a standard call comes in, the phone rings and an incoming call message appears on the screen.

- If you don't wish to answer the call, select **Ignore**.
- To answer the call, press . The message you were working on will be saved in the Saved folder. To return to the message, press  down to open the Messages menu, select **Saved** and select the message.

Viewing the OutBox

Your sent messages are automatically saved to the OutBox.

To view the OutBox:

1. Select **Menu** → **Messages**.
2. Select **OutBox**.
3. Press  up or down through the list of messages. One of the following symbols appears next to each message:



The message is pending and will be sent when possible. You can cancel delivery of the message.



The scheduled message will be sent at the scheduled time. You cannot cancel delivery of the message.



The message cannot be sent because service is not available. An alert appears on your phone if the message cannot be sent.



The scheduled message has been sent and will be delivered as scheduled. You cannot cancel delivery of the message.



The message has been received by the recipient you specified.



The message has been received and opened by the recipient you specified.
(This symbol may not be available. Check with your service provider.)



The message has been sent to more than one recipient.



The message has never been sent, or has not been sent since it was last modified. You can cancel delivery of the message.

Retrieving text messages

When a text message is received, your screen displays text similar to: “New message 1 Text Msg.” This text remains for about five minutes. After that, look for the  symbol at the top of your screen. The symbol flashes if the message is urgent. If your phone is set to Direct View, the body of the message appears on the phone screen automatically.

To activate Direct View, select **Menu** → **Messages** → **Msg Settings** → **Direct View** → **Enabled**.

If you see the “New Message” note

You can choose to:

- **View** the message—Press  twice and scroll down.
- **Ignore** the message—Press  right and press .
- **Clear the screen**—Press .

If you see the body of the message (Direct View)

The body of an incoming message appears on your home screen only if your phone is set to Direct View.

You can choose to:

- **Ignore** the message—Press .
- **Read** the message. See “Reading the message” on page 35.

Note: If you receive a new message while you are reading a message, the one you are reading is replaced by the new one. You can find the older message in the InBox: Press  down to open the Messages menu and select **Inbox**.

If you see the symbol

If the  symbol is blinking, the message is urgent.

1. Press  down.
2. Select **Inbox**.

A list of all your received messages appears. New, unread messages appear in **bold**.

3. Press  up or down to scroll through the list of messages.
4. Press  to read a message.

Reading the message

Note: Sounds embedded in text messages do not play if the phone is set to Silence All mode.

1. If the text message is long, press  down to view the entire message.

Note: Message length is limited by your service provider. An incoming message that exceeds the limit may be truncated.

2. When you are finished, you can **Reply** to the sender, **Play** the sound embedded in the message, **Erase** the message, **Save** the message to your Saved folder, or set additional **Options** for the message:

- View **Sender** information.
- **Forward** the message.
- **Reply with Copy** to reply to the message with a copy of the original attached.
- **Save Object(s)**, such as sound or pictures, from the message. (This option is available if the incoming message includes a graphic or sound.)
- **Save Contact** to save the sender's phone number or email address in your Contacts list. (This option is available if a vCard is included in the message.)
- **Save as AutoText** to save the text from the message as AutoText, which you can insert into other messages. Graphics and sound will not be saved as part of AutoText. (For more about AutoText, see page 37.)

3. Select **Done**.

Note: The  symbol indicates:

- A graphic did not come through. It may be too large or incorrectly formatted.
- An appended message is missing. (For more about appended messages, see page 32.)

Setting message alerts

You can set your phone to alert you of incoming text messages or pages. For more information, see “Setting message alerts” on page 45.

Erasing messages

Your phone is designed to store 99 text messages and pages. It is a good idea to erase old messages, as messages take up memory in your phone.

You have the option of erasing text messages and pages as you send or read them, erasing them one-at-a-time from the list in the OutBox or InBox, or erasing them all at once.

Erasing single messages

1. Select **Menu** → **Messages**.
2. Press  down and press  to select the type of text message you want to erase (**InBox**, **OutBox**, or **Saved**).
3. Press  to select the message to erase.
4. Select **Erase** to erase the message. A notification appears: “Erase this message?”

5. Select **Yes** to erase the message.

Note: You can erase a scheduled message from the OutBox, but you cannot cancel delivery of the message.

Erasing all messages

1. Select **Menu** → **Messages**.
2. Select **Erase Msgs**.
3. Press  up or down and press  to select an option:
 - **InBox** erases all messages in your InBox.
 - **OutBox** erases all messages in your OutBox.
 - **Saved Folder** erases all messages in your Saved folder.
 - **All Messages** erases all text messages in all folders listed above.
4. A notification appears: “Erase all messages?” Select **Yes** to erase messages or **No** to cancel.

Erasing messages automatically

Use this setting to have old messages automatically erased from the InBox when memory is low.

1. Select **Menu** → **Messages**.
2. Select **Msg Settings** → **Auto-Erase Text**.
3. Press  to select **Old InBox Msgs**.

Customizing message settings

To make messaging easier, you can customize settings for sending and receiving messages.

Creating group lists

You can create and save a list of multiple recipients. Your KX440 Series phone stores five group lists with up to 10 recipients per list.

1. Select **Menu** → **Messages**.
2. Select **Group Lists** → **Create New**.
3. Enter a name for the list. For help entering text, see page 23.
4. Press  to select **Next**.
5. To enter the first phone number or email address, select an option:
 - **Recent List**—Select numbers from your Recent List.
 - **New Address**—Enter the phone number or email address yourself. To learn how to enter text, see page 23.
 - **Contacts List**—Select contacts from your phone book.
6. To enter the next address, enter a space or comma after the first number or email address. (If you insert a saved contact or a number from the Recent List, the phone inserts the comma automatically.) Then press  right twice, select **Options**, and choose from the options.

7. When finished, press  right and press  to select **Done**.
8. To send a message to your new group, see “Sending text messages” on page 30.

Creating and editing prewritten messages (AutoText)

Your phone comes with prewritten (AutoText) messages, such as “Please call me,” which you can insert into the body of a text message. You can edit these messages and create new ones. Your phone can store up to 20 AutoText messages, with up to 100 characters per message.

1. Select **Menu** → **Messages**.
2. Select **Msg Settings** → **Edit AutoText**.
3. To create a new pre-written message, highlight **New AutoText** and press .

-or-

To edit an existing pre-written message, highlight the message and press .

4. Enter or edit the text and press  to select **Done**. For help entering text, see page 23.

Note: You can also save a message you are writing or an incoming message as AutoText. For directions, see “Setting sending options” on page 31 or “Reading the message” on page 35.

Switching default text entry mode

You can set the default text entry mode to appear in message text entry screens.

1. Select **Menu** → **Messages**.
2. Select **Msg Settings** → **Default Text**.
3. Select **Normal Alpha** or **Rapid Mode**.

For more information on text entry modes, see page 23.

7 CUSTOMIZING YOUR PHONE

The contents of the **Settings** menu are as follows.

Silent Mode

Vibrate Only
Vibrate, Ring
Lights Only
Norm. Sounds
Information

Keyguard

Guard now
30s autoguard
1m autoguard
5m autoguard
Disabled

Sounds

Ringer Volume
Ringer Type
Business Ring
Personal Ring
Roam Ringer
Earpiece Volume
Key Volume
Key Length
Missed Call
Smart Sound
Minute Alert
Spkrphone Vol.

Display

Backlighting
My Banner
Flashing Lights
Main Menu View
Screen Saver
Wallpaper
Color Themes
Auto-Hyphen
Language
Time Format
Contrast

Voice Services

Add Voice Dial
Erase Voice Dial
Voice Training
Voice Wake-Up
Voice Answer

Security

Lock Phone
Limit Calls
Lock Code
Erase Contacts
Emergency #'s

Call Information

Recent Calls
All Calls Timer

Network

Data/Fax Calls
Privacy Alert
Set Phone Line
Roam/Svc Alert
Roam Option
Digital/Analog
Location

Convenience

Airplane Mode
Shortcut Key
Fast Find
Frequent List
1-Touch Dialing
Web Prompt
Call Guard

Msg Settings

Voiceemail Num.
Alerts
Signature
Edit AutoText
Callback Number
Msg Receipt
Direct View
Save to Outbox
Auto-Erase
Default Text

Accessories

Pwr Backlight
Headset Ring
Auto-Answer
TTY Device
Com Speed

Silencing all sounds

Your phone is set to make sounds when you receive calls, press keys, navigate through menus, and receive alerts (such as new messages). You can silence all sounds and set the phone to vibrate or light up when you receive calls and alerts.

Setting the phone to vibrate or light up

1. Select **Menu** → **Settings** → **Silent Mode**.
2. Choose an option and press :
 - **Vibrate Only**—Causes the phone to vibrate instead of ringing or beeping.  appears. For BREWChat calls, the phone vibrates and the speakerphone is turned off.
 - **Vibrate, Ring**—Causes the phone to vibrate for the first 10 seconds and then ring.  appears. For BREWChat calls, the phone vibrates and the speakerphone is turned off.
 - **Lights Only**—Causes the phone to light up instead of ringing or beeping.  appears. For BREWChat calls, the phone vibrates and the speakerphone is turned off.
 - **Norm. Sounds**—Causes the phone to ring for the incoming call or alert. BREWChat call alerts sound through the speakerphone.
3. Press  to return to the home screen.

Note: The phone will ring when it is attached to an external power source (such as a charger), even if all sounds have been silenced.

Shortcut to Vibrate Only mode

- From the home screen, press  right and hold.

Turning sounds back on

To restore all sounds to the phone:

- From the home screen, press  right and hold.
- or—
- Select **Menu** → **Settings** → **Silent Mode** → **Norm. Sounds**.
- or—
- Press the speakerphone button (on top of the phone) during a BREWChat call.

The  or  disappears. The phone will now ring for incoming calls and alerts.

Choosing a different ringer

Your Kyocera KX440 Series phone has 15 ringers you can choose to use for incoming calls.

1. Select **Menu** → **Settings** → **Sounds** → **Ringer Type**.
2. Scroll down the list to hear the different ringers.
3. Press  to select a ringer from the list.

Specifying ringers for different callers

You can assign ringers to individual phone numbers saved in your Contacts directory.

- To assign a ringer to an individual contact, see page 26.
- To assign a ringer to a class of contacts:
 - a. Select **Menu** → **Settings** → **Sounds**.
 - b. Highlight **Business Ring** or **Personal Ring** and press .
 - c. Select a ringer and press .

Note: To classify a contact as Business or Personal, see page 26.

Importing additional ringers

You can import additional ringers into your KX440 Series phone using the Kyocera Phone Desktop software (sold separately). To purchase this software and other accessories, visit www.kyocera-wireless.com/store.

You may be able to download ringers over the air. Check with your service provider.

Adjusting volume

You can adjust the volume of the earpiece, the speakerphone, the ringer, or the tones you hear when the keys are pressed.

Adjusting the earpiece volume

- To adjust the earpiece volume manually during a call, press  up or down to find a comfortable level.
- To adjust the earpiece volume for all calls:
 - a. Select **Menu** → **Settings** → **Sounds** → **Earpiece Volume**.
 - b. Press  up or down.
 - c. Press  to save the setting.

Adjusting the speakerphone volume

- To adjust the speakerphone volume manually during a call, press the volume button on the side of the phone up or down.
- To adjust the speakerphone volume for all calls:
 - a. Select **Menu** → **Settings** → **Sounds** → **Spkrphone Vol.**
 - b. Press  up or down.
 - c. Press  to save the setting.

Adjusting the ringer volume

To adjust the ringer volume for incoming calls as well as the alerts for the Countdown Timer, Scheduler, and Alarm Clock:

1. Select **Menu** → **Settings** → **Sounds** → **Ringer Volume**.
2. Press  right or left.
3. Press  to save the setting.

Changing the key tones

You can change the volume and duration of the tones the phone makes when you press the keys. Select **Menu** → **Settings** → **Sounds** and choose **Key Volume** or **Key Length**.

Using shortcuts

From the home screen, you can access shortcuts by pressing the navigation key in different directions. Three shortcuts are automatically programmed into your phone:

Left locks the keypad.

Right silences sounds and sets phone to vibrate.

Down lists phone's Contacts directory.

For the fourth direction (up), you can set a shortcut to one of the features of your phone.

Defining the feature shortcut (up)

1. Select **Menu** → **Settings** → **Convenience** → **Shortcut Key**.
2. Highlight the feature you want a shortcut to, and press  to select it.

Using the feature shortcut

- From the home screen, press and hold  up.

Choosing a different language

Your phone may display alternative languages.

1. Select **Menu** → **Settings** → **Display** → **Language**.
2. Select a language, and press .

Personalizing the screen

Changing your banner

The banner is the personal label for your phone. It appears on the home screen above the time and date. The banner can be up to 14 characters long.

1. Select **Menu** → **Settings** → **Display** → **My Banner**.
2. Select **Edit**.
3. Press  to clear the screen.
4. Enter your new text.
5. Press  to save.

Choosing a different menu view

You can change the appearance of the menus you see when you select **Menu** from the home screen.

1. Select **Menu** → **Settings** → **Display** → **Main Menu View**, then the option you want:



2. Press  to return to the home screen.

The next time you press , you will see the menu view you selected.

Adjusting the backlighting

Your screen lights up while you are in a call or when you press a key on the keypad. However, you can change when and how backlighting lights up.

1. Select **Menu** → **Settings** → **Display** → **Backlighting**.
2. Select an option from the list:
 - **5 seconds, 10 seconds, or 30 seconds**— (Default) Turn backlighting on for 5, 10, or 30 seconds after your last keypress.
 - **5 sec/in call, 10 sec/in call, or 30 sec/in call**—Turn backlighting on for the duration of a call, and for 5, 10, or 30 seconds after your last keypress.

Note: These three settings drain the battery more quickly and reduce talk and standby times.

Setting power backlighting

You can set backlighting to remain on when an external power source, such as the AC adapter, is used with the phone.

Note: Power backlighting may not be available with some accessories.

1. Select **Menu** → **Settings** → **Accessories** → **Pwr Backlight**.
2. Select **Always On** to keep backlighting on. (The battery charges more slowly when power backlighting is on.)

Setting backlighting to flash

You can set the backlighting on your phone to flash in a certain style when an incoming call is received. When this setting is activated, the lights will flash even if you silence the ringer.

1. Select **Menu** → **Settings** → **Display** → **Flashing Lights**.
2. Select from **Fast Flash**, **Slow Flash**, **Heartbeat**, or **Rhythm**. As you highlight the options a sample of each flash is provided.
3. Press  to select your option.

Caution: A small percentage of users may be photo sensitive to flashing lights. In rare cases, exposure to flashing lights, under certain circumstances, may produce seizures. While such an event is not known to occur with mobile phone use, and the KX440 Series phone has been designed to minimize the possibility of any such occurrence, those who believe they may be photo sensitive should not enable the Flashing Lights feature.

Changing the display contrast

1. Select **Menu** → **Settings** → **Display** → **Contrast**.
2. Select the level of contrast you want.

Setting numbers to auto-hyphenate

Auto-hyphenation is a setting that automatically inserts hyphens into your phone numbers to be consistent with the U.S. dialing plan. For example, 1-222-333-4444.

- Select **Menu** → **Settings** → **Display** → **Auto-Hyphen** → **Enabled**.

Selecting a screen saver

Screen savers work only from the home screen, and they are activated 10 seconds after the last keypress. Incoming calls and alerts override screen savers.

1. Select **Menu** → **Settings** → **Display** → **Screen Saver**.
2. Highlight a screen saver and press .
3. Press  to return to the home screen and wait 10 seconds to view the screen saver you chose.

Selecting wallpaper

Wallpaper appears on the home screen when the phone is on, but not in use.

1. Select **Menu** → **Settings** → **Display** → **Wallpaper**.

2. Highlight a wallpaper design and press .
3. Press  to return to the home screen and view the wallpaper you chose.

Selecting a color theme

You can select a color theme to display on your phone.

1. Select **Menu** → **Settings** → **Display** → **Color Themes**.
2. Scroll through the options to see samples of the color themes.
3. Highlight a color theme from the list and press .
4. Press  to return to the home screen.

Choosing a different time/date format

1. Select **Menu** → **Settings** → **Display** → **Time Format**.
2. Highlight the option you want.

Creating a secure environment

This section describes all the features involved in securing your phone and preventing access to personal information. All security features are shielded by a four-digit lock code.

Changing your lock code

The lock code is typically preset to 0000 or the last 4 digits of your phone number. To change your lock code, take these steps:

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Lock Code**. A message appears: “Change Code?”
4. Select **Yes** and enter a new four-digit code. Enter your new lock code again.

Locking your phone

When your phone is locked, you can call only emergency numbers or a special number set up by your service provider. You can still receive incoming calls, and you can make and receive BREWChat calls.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Lock Phone**.
4. Highlight an option:
 - **Never**—Does not lock the phone.
 - **On power up**—Locks the phone every time you turn it on.
 - **Now**—Locks the phone immediately.
5. Press .

Unlocking the phone

1. From the home screen, press  to select **Unlock**.
2. Enter your four-digit lock code.

Designating emergency numbers

The emergency numbers feature allows you to specify three personal phone numbers that can be called when the phone is locked.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Emergency #'s**.
4. Select an **Unassigned** slot.

Note: Enter the phone number, including the area code. Do not enter 1 before the area code.

5. Press  to select **Done**.

Notes:

- You can view these numbers only when they're being entered for the first time.
- You cannot edit these numbers.
- To make a call to an emergency number from a locked phone, you must dial the number (including area code) exactly as it was stored in Emergency Numbers.

Restricting calls

You can restrict the calls that can be made from your phone to only those that have been saved in your Contacts. This setting does not restrict BREWChat calls.

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Limit Calls**.
4. Select **Limit Out**.

Erasing all contacts

1. Select **Menu** → **Settings** → **Security**.
2. Enter your four-digit lock code.
3. Select **Erase Contacts**.
4. Select **Yes** to erase all contacts. A message appears: “Erase ALL contacts?”
5. Select **Yes** to erase all contacts.

Setting message alerts

You can choose how you want to be alerted of incoming voicemail, pages, or text messages.

1. Select **Menu** → **Settings** → **Msg Settings** → **Alerts**.
2. Select the type of alert: **Message Alert**, **Net Alert**, **Page Alert**, or **Voicemail Alert**.
3. Press  to select an option:
 - **Vibrate**, **Beep**, **Hiya!**, **Rock!**, or **Happy**—Set the phone to vibrate, beep, or play a tune once when a new message is received.

- Options with **remind**—Set the phone to notify you once when a new message is received and then notify you again every five minutes. To stop a reminder alert, press  to select **Ignore**.
- **Disabled**—Turn off message alerts.

Setting alerts for your headset

When a headset (sold separately) is attached to the phone, you can set alert sounds to originate from the headset.

1. Select **Menu** → **Settings** → **Accessories** → **Headset Ring**.
2. Select **Out of headset** to have alerts originate from the headset.

Network settings

Switching between phone lines

Your phone can have two service accounts, or phone lines, associated with it. Each phone line has its own phone number. When you are using one line, you cannot receive calls from the other. It would be as if the phone were “off” for that number. Your voicemail, however, will still take messages. All contacts and settings are shared for both lines.

Note: Before you can switch between phone lines, you must first establish a second phone line with your service provider. Once it has been established, a second phone number becomes available in the menu for selection.

1. Select **Menu** → **Settings** → **Network** → **Set Phone Line**.
2. Select the other line and press .

Connecting to a TTY/TDD device

You can connect the phone to a TTY device for the hearing impaired. **Note:** Enable TTY only when using the phone with a TTY device.

1. Connect the TTY device to the phone.
2. Enter      from your keypad.
3. Press  to select the TTY option.

Setting position location

This setting allows you to share your location information with network services other than emergency services (911, 111, 000, 999, etc.), in markets where service has been implemented.

Note: This feature works only when your phone is in digital mode. You do not have the option of turning off the locator to emergency services.

1. Select **Menu** → **Settings** → **Network** → **Location**.
2. If you see a message prompt, press  to continue.
3. Select **911 Only** or **Location On**.
 - **911 Only** (default) shares your position information only with emergency services when you call your 3-digit emergency code.
 - **Location On** shares your position information with the service provider network, in addition to emergency services.

For information on emergency calls, see “Calling emergency services” on page 18.

8 USING VOICE RECOGNITION

Voice recognition allows you to make and answer calls by speaking commands into the phone's microphone.

Note: You cannot use voice recognition to end a call; you must press .

Setting up voice dialing

To make or receive calls using voice recognition (voice dialing), contacts must be saved and have associated voice tags.

Creating a voice tag for a contact

1. Select **Menu** → **Contacts** → **Add Voice Dial**.
2. Follow the voice prompts to record a name for the contact.
3. Highlight an option:
 - **Add new**—Save a new contact to go with the voice tag.
 - **Add to existing**—Add the voice tag to a saved contact.

Viewing entries with voice tags

- Select **Menu** → **Contacts** → **Voice Dial List**.
A list of all contacts with assigned voice tags appears.

Editing a voice tag

1. Select **Menu** → **Contacts** → **Voice Dial List**.
2. Highlight the contact you want to edit, and press  to select it.
3. Highlight the phone number and press .
4. Select **Add Voice Dial**, **Edit Voice Dial**, or **Erase Voice Dial**.
5. Follow the prompts.

Calling using voice tags

1. If you haven't already done so, record a voice tag for the person you wish to call.
2. From the home screen, press . The phone responds: "Say a name."
3. Say the name of the person you want to call.
4. If the name you said matches a contact in the Voice Dial List, the phone responds: "Calling (Name)." Remain silent to make the call, or say "**No**" to cancel.

Note: If the phone finds multiple voice tags that sound like the name you said, you will be asked to verify which name you want to call. Say "**Yes**" when you hear the correct name. Say "**No**" when you hear an incorrect name.

5. When you are finished, press . You cannot end the call with a voice command.

Using voice features with hands-free car kits

You can use voice commands to make a phone call or to answer the phone only if your phone is connected to a professionally installed Kyocera hands-free car kit (sold separately).

Note: The following features apply only to professionally installed hands-free car kits unless noted.

To shop for hands-free car kits, visit www.kyocera-wireless.com/store or call one of the customer support phone numbers listed on page vi.

Waking up the phone

If your phone is connected to a professionally installed Kyocera hands-free car kit, you can use a voice command to activate the phone to make a call.

Note: Voice Wake-up does not work with Keyguard active.

To activate the Voice Wake-up setting:

1. Select **Menu** → **Settings** → **Voice Services** → **Voice Wake-Up** → **With ext. pwr.**
2. Select **Menu** → **Settings** → **Keyguard** → **Disabled**, then press .

To wake up the phone:

1. Say **“Wake Up”** and listen for a tone.
2. Say **“Wake Up”** again until you hear two tones.

If the phone does not recognize your “Wake up” command, see “Training voice recognition” on page 49.

Answering the phone

You can set the hands-free car kit to either (1) answer automatically or (2) ring until you answer using a voice command.

Answering automatically

To set your phone to answer automatically:

- This setting also works with the portable hands-free car kit.
- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **After 5 secs.**

Answering using voice commands

If Auto-Answer is turned off, you can use a voice command to answer an incoming call using the Kyocera hands-free car kit.

To turn off Auto-Answer:

- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **Disabled.**

To activate the Voice Answer setting:

1. Select **Menu** → **Settings** → **Voice Services** → **Voice Answer.**
2. Highlight **Enabled**, then press .
3. Select **Menu** → **Settings** → **Silent Mode** → **Norm. Sounds.**

To answer a call:

When you receive an incoming call, the phone responds: “Incoming call, answer?” or “Incoming roam call, answer?” If the caller is recognized as a saved contact entry, then the phone will say “Incoming call from (Name), answer?”

- Say **“Yes”** or press any key except .

Ignoring an incoming call

To ignore an incoming call, do one of the following:

- Say **“No”** and press  to silence the alert.
- Remain silent. The voice alert repeats twice and the phone rings once, then returns to the home screen.

Training voice recognition

If your phone is having trouble recognizing your voice, you can train it with the commands **“Yes,”** **“No,”** and **“Wake up.”**

1. Select **Menu** → **Settings** → **Voice Services**.
2. Select **Voice Training**.
3. Read the message and press .
4. Select **Train All**.
5. Follow the prompts for each word until training is complete.

Note: The “Wake up” command can only be used with a car kit or headset (both sold separately). See page 48.

9 MEDIA GALLERY / FUN & GAMES

The games Tetris and Brick Attack may not be available on your phone. Check with your service provider for availability. If you receive an **incoming call alert** while you are playing Tetris® or Brick Attack™, the game is paused and exited. You can return to play once the call alert ends. Games do not remain paused if the phone is turned off or loses power.

Tetris

The goal of this game is to guide the falling blocks down the screen to create a solid horizontal row at the bottom. The game ends when the new block cannot enter the play field because the area is occupied by another block or obstacle.

1. Select **Menu** → **Fun & Games** → **Tetris**.
2. Select an option and press  to select it.
 - **New Game**—Initiates game play. To pause the game, press  or . Pressing  returns you to the menu where you can **Continue Game** to resume or choose from the other available options.
 - **Resume Saved**—Returns you to the game you were last playing.
 - **Scoreboards**—Displays the top five scores for the different game variations, including **No Time Limit** (default), **Timed 2 Min**, **Timed 3 Min**, **Timed 5 Min.**, and **Garbage**.

- **Settings**—Choose various settings for your Tetris game:
 - **Game Type**—Choose type of game.
 - **Music**—Choose when music will play with this game: **Music Always**, **During Title**, or **No Music**. (The No Music setting does not silence the sounds made when you press keys. To silence keys, see “Silencing all sounds” on page 39).
 - **Next Piece**—Choose whether to show the next piece that will fall.
 - **Sound Effects**—Choose to hear sound effects while playing the game.
 - **Starting Level**—Choose a level of play.

Navigation: Use the following keys to guide the blocks down the screen:

To:	Use:
Rotate Counterclockwise	
Hard drop the tile	
Move Left	 or  left
Rotate Clockwise	 ,  , or  up
Move Right	 or right
Soft drop the tile	 or  down
Return to Tetris menu	
Pause	

Brick Attack

The goal of this game is to eliminate bricks arranged in levels. You send a moving ball upward using a paddle at the bottom of the screen.

1. Select **Menu** → **Media Gallery** (or **Fun & Games**) → **Brick Attack**.
2. Press  to select **Yes** at the prompt, “Turn off backlight to conserve battery?”
3. Press  to select **New**.
 - To pause the game, press , then press  to **Resume**.
 - To move the paddle, press  left or right.
4. To exit the game, highlight **Exit** and press .

My Sounds

Your phone contains preset sounds, which you can add to outgoing text messages. To access stored sounds:

1. Select **Menu** → **Media Gallery** (or **Fun & Games**) → **My Sounds**.
2. Press  up or down to scroll through the sounds.
3. Highlight an option and press  to select it:
 - **Play** allows you to listen to the sound.
 - **Send** opens a new message entry screen.
 - **Assign** allows you to use the sound as a ringer on your phone.
 - **Delete** erases the sound from your **My Sounds** list.

My Pictures

The **My Pictures** menu stores graphics you have created using the Doodler™ or received via text messaging. It also includes predefined graphics for your use.

All downloaded graphics are also stored in the **Screen Saver** menu.

To view, edit, or erase graphics:

1. Select **Menu** → **Media Gallery** (or **Fun & Games**) → **My Pictures**.
2. Press  up or down to scroll through the graphics.
3. Highlight an option and press  to select it:
 - **Send** opens a new message entry screen.
 - **Assign** sets your graphic as wallpaper or as a screen saver.
 - **Edit** takes you to the Doodler, where you can modify the graphic. You cannot edit graphics that came with the phone.
 - **Delete** erases the graphic from memory. The graphic is also erased from the **Screen Saver** menu. You cannot delete graphics that came with the phone.
 - **Exit** returns you to the home screen.


Managing memory

It is a good idea to erase old sounds and pictures, as they take up memory in your phone. To erase a sound or picture, select it and then select **Delete**.

Doodler


You can create and save graphics on your phone.

1. Select **Menu** → **Media Gallery** (or **Fun & Games**) → **Doodler**.
2. Wait 5 seconds for the intro screen to disappear, or press  to clear it.
3. Select **New Doodle** to open the drawing screen.

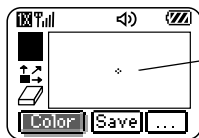

4. Use keys 1–9 to move the cursor around the screen as indicated.

Note: Press  to bring the cursor back to center.

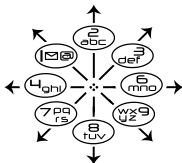

For more drawing tips, refer to the following sections.

Select a drawing color

1. Press  left or right to highlight **Color** at the bottom of the screen. Press .
2. Highlight a color from the palette and press .

Move cursor away from drawing

1. Press  up or down to select .
(Shortcut: Press .)
 2. Press a number key to move the cursor.
- Note:** To start drawing again, select a drawing shade or color.

Clear screen

- Press .

Erase part of drawing

1. Press  up or down to select .
2. Press a number key to move the eraser.

Add a shape

1. Press  left or right to select **Add Shape**.
 2. Press .
 3. Select a shape and press .
 4. To modify the shape, press  right or left to highlight an option and press .
- Options are **Size**, **Rotate**, and **Move**. (To move the shape, use keys 1–9.)
5. Select **Done**.

Saving the doodle

It is a good idea to save the doodle while you are working on it. If you receive a call while creating an unsaved doodle, it will be lost.

- Highlight **Save** and press . The image will be saved in the My Pictures folder. (See page 51.)

Note: If you make changes to an existing doodle, you must save it with a different name.

Resuming a doodle

- To return to the last saved doodle you were working on, select **Menu** → **Media Gallery** (or **Fun & Games**) → **Doodler** → **Resume Doodle**.
- To return to another saved doodle, select **Menu** → **Media Gallery** (or **Fun & Games**) → **Doodler** → **My Pictures**.

Scheduler

The Scheduler allows you to schedule events and set reminder alerts.

Note: You cannot access Scheduler if your phone does not have a signal.

Adding an event

1. Select **Menu** → **Tools** → **Scheduler**.
 - For a day in this month, select **View Day**. Press  left and right to scroll through days.
 - For a day in a different month, select **View Month**. Press  up or down to scroll through months, and right or left to scroll through days.
2. Press  to add an event to a selected date.
3. Enter a name for the event and press . For help entering text, see page 23.
4. Set the event Start time, Duration, and Alarm and press .
 - Press  up or down to select hour, minutes, and timing of alarm.
 - Press  left or right to move between fields.
5. Add a note to the event and press  or press  twice to finish.

Viewing, editing, or erasing an event

1. Select **Menu** → **Tools** → **Scheduler**.
2. Select **View Day** or **View Month** to find the event you want to view, edit, or erase.
3. Press  up, down, left, or right to highlight an event and press  to select it.
4. Press  right and press  to select **Edit**, **Erase**, or **New**. Follow the prompts.
5. Press  to return to the home screen or  to return to scheduler options.

Alarm Clock

Use the Alarm Clock to set an alert for a specific time. The alert occurs only if the phone is on.

1. Select **Menu** → **Tools** → **Alarm Clock** → **Set**.
 - Press  up or down to select **AM** or **PM**.
 - Press  left or right to switch between hours and minutes.
 - Use the phone keypad to enter numbers.
2. Press  to select **Done** and save the setting.
3. When the alarm rings, select **Off** to turn off the alarm or **Snooze** to silence the alarm for 10 minutes.

Tip Calculator

The Tip Calculator helps you calculate how much tip to include on a bill.

1. Select **Menu** → **Tools** → **Tip Calculator**.
2. Enter the amount of your bill and press .
3. Select the amount you want to include as a tip (10%, 15%, 18%, 20%, Other) and press . Your total bill appears, including tip.
4. If you want to split the bill, press  right and press  to select **Split**.
5. Press  to clear the default of 2 guests.
6. Enter the number of guests and press . The amount each guest pays is calculated.

Calculator

Use the calculator for basic mathematical equations.

1. Select **Menu** → **Tools** → **Calculator**.
2. Use the keypad to enter numbers.
3. Press  to select mathematical operations.
= equal + add x multiply
÷ divide - subtract . decimal point
C Clear all numbers entered and display a zero.
MR Display the value currently stored in memory.
M+ Add the displayed digit to the value stored in memory.
MC Clear the value currently stored in memory.
± Change the sign of the displayed number.

-  Clear one function or one digit from the screen. Hold down to clear all of the digits and operations and display a zero.

-  Exit the calculator and return to home screen.

Timer

This timer counts down for a specified amount of time. It beeps when that amount of time has elapsed.

1. Select **Menu** → **Tools** → **Timer**.
2. Press  to **Set**.
3. Press  up or down to set the hours, minutes, and seconds. To move the cursor, press  left or right.
4. Select **Start** to begin the countdown.
Select **Stop** to pause the countdown.
5. When the alarm rings, press  to silence it.

Stopwatch

1. Select **Menu** → **Tools** → **Stopwatch**.
2. Select **Start** to have the stopwatch begin counting.
3. Select **Stop** to stop counting.
4. Select **Reset** to set the counter back to zero and begin counting again.
Press  when finished.

11 CONNECTING TO THE INTERNET

Using the Web Browser

You can use your phone to browse the Internet if you have obtained phone Internet services from your service provider and if over-the-air Internet access is available in your area.

Note: You cannot receive incoming calls while you are using the Web Browser.

Starting the Web Browser

1. Select **Menu** → **Web Browser**.

A message about airtime fees appears every time you start the browser.

To cancel the message, see “Changing the Web prompt” on page 57.

For more information about how airtime is charged, contact your service provider.

2. Press to continue.

If this is the first time you have connected to the Internet, a message informs you that security is not yet enabled for your Web Browser.

3. Press to select **Yes** to enable security.

When you are connected, a browser home page appears. It has a list of bookmarks and Web menu options at the bottom of the screen.

- A  appears in a secure session.
- An underline and an arrow indicate that there is more text. Press  down to view more text. Press  to return to the previous screen.

4. When you have finished using the Internet, press to exit the browser.

Using the Web menu options

The following options may appear on your screen:

- **Home** returns you to the main Web Browser window, or home page.
- **Mark Site** saves the current location as a bookmark for easy access.
- **Setup** gives you options for changing how information is displayed.
 - **Show URL** displays the entire URL.
 - **About Openwave** displays information about your Web Browser version.
 - **Encryption** should not be used unless you are instructed to do so by your service provider.
 - **UP.Link** selects a different browser server. You can use this option if you have more than one Web Browser account.
 - **Restart** restarts the Web Browser.

Checking Net alerts

Alerts received from a Web site are sent to your **Net Alerts** inbox.

1. Select **Menu** → **Messages** → **Net Alerts**. This action launches the browser inbox.
2. Select **Net Alerts**. This action launches the browser inbox.
3. Press  to accept browser fees.
4. Select an alert and follow the prompts.

Searching for a Web site

How you search for a Web site depends on your service provider. For more information, contact your service provider.

Bookmarking a Web site

1. Go to the site you would like to bookmark.
2. Select **Mark Site** from the bottom of the screen.

Going to a bookmarked site

1. Select **Menu** → **Web Browser**.
2. If you see a message prompt, press  to continue.
3. From your Web home page, press  right to highlight **Bookmarks**. A list of bookmarks appears.
4. Enter the number corresponding to the bookmark you want and press .

Changing the Web prompt

1. Select **Menu** → **Settings** → **Convenience** → **Web Prompt**.
2. Highlight an option and press  to select it:
 - **At Start** confirms that airtime fees will be applied when you use the browser.
 - **At End** verifies you want to exit the browser.
 - **Both** prompts you when you start the browser and exit the browser.
 - **No Prompts** does not use any prompts.

12 USING BREW APPS

Your Kyocera phone has the ability to download and manage applications from the Internet through the BREW Apps™ menu.

For more information about the capabilities of BREW Apps and application pricing, contact your service provider.

Note: You can open the BREWChat walkie-talkie feature from this menu by selecting **BREW Apps** → **BREWChat**. For more information about BREWChat calling, see page 6.

The way it works

You connect to the server, download applications, and then manage them as you like. When you choose an application, you have the option of choosing a demo, various limited use options, or the full version—all varying in price. If you choose a demo, BREW lets you know when it has expired. If you choose a priced version, the amount is added to your phone bill. BREW also lets you know if you're running out of memory. At that point, you can either disable an application or remove it completely.

Downloading an application

1. From the home screen, select **Menu**.

2. Select **BREW Apps**.

The BREW Apps menu contains **MobileShop**, **BREWChat**, **Settings**, and **Help**. MobileShop is your link to downloading applications.

3. Select **MobileShop**.

When a connection to the server is made, the MobileShop menu appears with a list of application types to choose from.

Select an application type.

A full list of applications of the type you selected appears. New apps are indicated by an arrow on the left.

Note: Long titles scroll left as you highlight them.

4. Select an application.

A list of usages appears.

There may be one or more usages available. The costs are specified for each.

5. Select a usage.

You are then prompted by a message asking you to confirm your choice.

6. Select **Yes** to confirm.

The application is downloaded to your phone.

Note: Download times vary.

7. To open the application now, select **Yes**. If you choose **No**, you return to the BREW menu, where you see a link to your new application.

Note: Your connection to the application server automatically ends after 30 seconds, unless you connect again to download more apps. If you want to end the connection manually, press the End/Power key on your phone.

Opening an application

Downloaded applications are stored under the BREW menu. Each application comes with its own unique icon, to help you identify it easily.

1. Select **Menu** → **BREW**.

Note: The BREW icon always remains at the top of this menu. Downloaded applications are listed after.

2. Highlight and select the icon for the application you want to open.

Viewing application details

You can get information about the size of an application and how many uses it has left before it runs out.

1. Select **Menu** → **BREW** → **Settings** → **Manage Apps**.
2. Select the application you want details for.

Removing an application

Important: If you remove an application, it is removed completely from your phone. If you want to use it again, you must pay for it again. If you want to free up space on your phone, we recommend you disable the application (see next section).

1. Select **Menu** → **BREW** → **Settings** → **Manage Apps**.
2. Select the application and then select **Remove**.
3. Select **Yes** to confirm your choice.

Disabling an application

If you are running out of memory and would like to download more applications, but do not want to completely remove those you have paid for, you can simply disable them. This means you have to re-download an application in order to use it again, but don't have to pay for it again.

1. Select **Menu** → **BREW** → **Settings** → **Manage Apps**.
2. Select the application and then select **Lock App**.
3. Select **Yes** to confirm your choice.

Note: The app is still listed in the BREW menu. The icon looks like an empty box.

Checking available memory

The amount of available memory depends on the number of applications you downloaded.

- Select **Menu** → **BREW** → **Settings** → **Manage Apps**.

System Info is already highlighted. The amount of memory left is shown at the bottom of the screen.

- To see more detailed memory information, select **System Info**.

The System Info screen is displayed with further information.

INDEX

Numerics

1-Touch dialing, 20
911, 111, or 000 calls, 18

A

airplane, 18
Alarm Clock, 5, 54
alarm clock
 volume, 40
alerts
 for headsets, 45
 for messages, 45
 for missed calls, 19

analog mode, 5
auto-hyphenation, 43
AutoText, 31, 32, 37

B

backlighting, 42
banner, 41
battery, 1
blocking outgoing calls, 45
bookmarks, 57
BREWChat, 6
 call types, 6
 chat room, 6
 icons, 16
Brick Attack, 51

C

Calculator, 55
call counters, 21
callback number, 31
calling emergency numbers, 18
chat room, 6
contacts

BREWChat, 12
 phone contacts list, 26
contrast, 43
Countdown Timer
 volume, 40
countdown timer, 55

D

digital mode, 5
display contrast, 43
Doodler, 52
download ringers, 40

E

emergency
 calls from an airplane, 18
 position location, 5, 46
emoticons, 31
erasing
 contact entries, 45
 text messages, 35

F

Fast Find, 28
finding a saved phone number,
 28
flashing lights, 42

G

games
 Brick Attack, 51
 Doodler, 52
 Tetris, 50

H

hands-free car kit
 answering using voice, 48

hands-free headset
 and phone ringer, 45
 jack, 3
hard pause, 27

I

icons, 5, 16
InBox, 34

K

keyguard, 5, 21
keypad, locking, 21

L

language, 41
lights, 42
 lights-only mode, 5, 39
 set to flashing, 42
limiting calls out, 45
lock code, 44
locking
 keypad, 21
 phone, 44
loudspeaker (speakerphone)
 location, 3
 volume, 40

M

Media Gallery, 50, 58
memory, saving, 35
menu view, 42

N

number mode, 23
number type, 26

O

OutBox, 33

P

- phone book
 - BREWChat contacts, 12
 - phone contacts list, 26
- phone numbers
 - editing, 27
 - finding, 28
 - saving, 26
 - verifying your own, 2
- phone, unlocking, 44
- portable hands-free car kit, 48
- position location, 5, 46
- prepend, 19, 28

R

- Recent calls, 11, 19
- redialing a number, 17
- resetting the phone, v
- ringers
 - choosing types, 39
 - downloading, 40
 - for different calls, 40
 - for roaming calls, 22
 - silencing, 2
 - volume, 40
- roaming, 5
 - alerts, 21
 - controlling, 22
 - ringer, 22

S

- saved phone numbers
 - editing, 27
 - finding, 28
- Scheduler, 54
 - volume, 40
- screen contrast, 43
- screen icons, 5, 11, 16, 19, 23,

- 33, 39
- screen savers, 43
- secret contacts, 19, 26
- security, 43
- shortcuts, 41
- silent mode, 5, 39
- sound files, 51
- speakerphone
 - button, 3
 - volume, 15, 40
- speed dialing, 20
- Stopwatch, 55
- symbol mode, 24

T

- Tetris, 50
- text entry, 23
 - quick reference, 25
- text messages, 30
 - erasing, 35
 - retrieving, 34
 - Direct View, 34
 - sending, 30
- time format, 43
- Timer, 55
- timing calls, 21
- Tip Calculator, 55
- TTY/TDD, 46

U

- unlocking the phone, 44

V

- vibrate, 5, 39
- Voice Answer, 48
- voice dialing, 47
- voicemail, 2, 20
- volume
 - earpiece, 15, 18, 40

- key tone, 41
- loudspeaker, 40
- ringer, 40
- speakerphone, 15

W

- walkie-talkie (BREWChat), 6
 - call types, 6
 - chat room, 6
 - icons, 16
- Web Browser, 56



Kyocera Wireless Corp.
10300 Campus Point Drive
San Diego, California 92121 USA
www.kyocera-wireless.com

82-K5873-1EN, Rev. 002